# **NOVOS 3 (EPD) VOC**

Room sensor for air quality with optional temperature and humidity



#### **Datasheet**

Subject to technical alteration Issue date: 01.01.2024 • A124





### » APPLICATION

Room sensor for recording mixed gas and additionally temperature and humidity (relative, absolute, enthalpy, dew point). The maintenance-free sensor creates the conditions for a pleasant indoor climate and well-being. Typical applications are schools, office buildings, hotels, cinemas or similar.

### »TYPES AVAILABLE

Room air quality sensor VOC - active 0..10 V | 4..20 mA

- NOVOS 3 VOC V\*
- NOVOS 3 VOC A\*

Room air quality sensor VOC + temperature - active 2x 0..10 V | 2x 4..20 mA

- NOVOS 3 VOC Temp VV\*
- NOVOS 3 VOC Temp AA\*

Room air quality sensor VOC + temperature + humidity - active 3xV 0..10 V

NOVOS 3 VOC Temp rH 3xV\*

\*Optional available with ePaper Display

### » SECURITY ADVICE - CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

page 2 / 7 Issue date: 01.01.2024

### »BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage (±0,2 V) this is normally done by adding or reducing a constant offset value.

Thermokon transducers can be operated with variable operating voltages. The transducers are set at the factory with a reference operating voltage of 24 V =.

At this voltage, the expected measuring error of the output signal will be the least. Other operating voltages, can cause a measurement deviation changing power loss of the sensor electronics.

A recalibration can be carried out directly on the unit or via a software variable (app or bus).

Remark: Occurring draught leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

#### » APPLICATION NOTICE FOR HUMIDITY SENSORS

At regular environmental condition, it is recommended to calibrate the sensor annually to check the compliance with the accuracy required in the application. The following conditions can damage the sensor element or lead in long therm to loss of the specified accuracy:

- Mechanical stress
- Contamination (e.g. dust / fingerprints)
- Aggressive chemicals
- Ambient conditions (e.g. condensation on measuring element)



Re-calibration or exchange of the sensor element are not subject of the general warranty.

#### » APPLICATION NOTICE FOR AIR QUALITY SENSORS VOC

Volatile organic compunds (VOC) are gaseous and vaporous substances of organic origin in the air. VOC-sensors monitor the significant part of humanly olfactory sensed air quality. (e.g. body odur | tobacco smoke | odur of materials, furniture, carpets, paint, adhesives, ...)

The VOC-Value is an application-specific indication for air quality and doesn't provide any information about individual components of VOC

A VOC sensor oxidises the organic molecules that collide with it, which results in changing the resistance of the semiconductor.

Any contact with the sensitive sensors must be avoided and will invalidate the warranty.

The VOC Sensor is factory calibrated and can be calibrated via NOVOSapp subsequently, if needed.

Issue date: 01.01.2024 page 3 / 7

## »TECHNICAL DATA

	_				
Measuring values	VOC + temperature (option	VOC + temperature (optional) + humidity (optional)			
Output voltage (type-dependent)	V   VV   3xV  1x/2x/3x 010 V or 05 V, min load 10 kΩ (live-zero configuration 110/210 V) configurable via Thermokon NOVOSapp				
Output Amp (type-dependent)	A   AA 1x/2x 420 mA, max. load 500 $\Omega$				
Power supply (type-dependent)	<b>V   VV   3xV</b> 1535 V = or 1929 V ~ S	<b>V   VV   3xV</b> 1535 V = or 1929 V ~ SELV		<b>A   AA</b> 1535 V = SELV	
Power consumption (type-dependent)	V   VV   3xV typ. 0,4 W (24 V =)   0,8 V	A (24 V ~)	<b>A   AA</b> max. 0,5 W / 24 V =		
Display (optional)	ePaper, as measured value display, display can be parameterized via Thermokon NOVOSapp				
Enclosure	PC V0, pure white, design cover (optional)				
Protection	IP20 according to DIN EN 60529				
Cable entry	rear entry, breaking points	rear entry, breaking points bottom, drill mark top			
Connection electrical	tool-free mountable spring terminal, max. AWG16				
Ambient condition	050 °C, max. 85% non-condensing				
Mounting	surface mounted on flush-mounting box ( $\emptyset$ =2.36in.   60 mm) or to be mounted flat onto the surface using screws, base part can be mounted and wired separately				
Notes	mixed gas sensors detect gases and vapours which can be oxidised (burnt): Body odours, tobacco smoke, exhalations emitted by materials (furniture, carpets, paint, glue)				
» Temperature (optional)					
Output signal range temp. *scaling analogue output	0+50 °C (default setting), selectable from 4 temperature ranges -50+50   0+50   -15+35   -20+80 °C, configurable via NOVOSapp				
Accuracy temperature (type-dependent)	±0,5K (typ. at 21 °C)				
» Humidity (optional)					
Measuring range humidity (type-dependent)	relative humidty (default) 0 100% rH	Enthalpy 085 KJ/kg	absolute humidity 050   080 g/m³,	<b>dew point</b> 0+50   -20+80 °C,	

Measuring range humidity (type-dependent)	relative humidty (default) 0100% rH	Enthalpy 085 KJ/kg	absolute humidity 050   080 g/m³,	<b>dew point</b> 0+50   -20+80 °C,
	configurable via Thermok	on NOVOSapp		
Accuracy humidity (type-dependent)	±2% between 1090% rH (typ. at 21 °C)			

## » VOC

Measuring range VOC	0100 %
Sensor	VOC sensor (heated metal oxide semiconductor)

page 4 / 7 Issue date: 01.01.2024

### » MOUNTING ADVICES

The Accuracy of the room sensors are influenced by the technical specifications as well as the positioning and the installation type.

#### **During Assembly:**

- Seal mounting box (if present).
- · Installation type, air draught, heat source, radiation heat or direct sunlight can affect the measurement.
- Bulding material specific properties of the installation place (brick-, concrete-, partition wall, cavity wall, ...) can affect the measurement.
   (e.g.: Concrete accepts room temperature variation slower than cavity walls)

## Assembly not recommendet in...

- Air draught (e.g.: close to windows / doors / fans ...)
- · Near heating sources,
- · Direct sunlight
- Niches / between furniture / ...

Please make sure that the device is de-energized if you want to install it!


The installation can be performed on the flat wall surface or on a flush-mounted box. A representative place should be selected. Sunshine and draft, e.g. in the installation tube should be avoided, so that the measurement result is not falsified. Seal the end of the installation tube.


- For wiring, the upper part of the device must be removed from the base plate. Base plate and upper part are detachably connected to each other by means of locking lugs.
- The mounting of the base plate on the flat wall surface is done with rawplugs and screws.
- · Finally, the device is attached to the base plate and fixed with the screw.

#### Housing open / close

Snap the upper part of the housing into the locking lug on the upper side

Fix the upper part of the housing on the underside with the screw

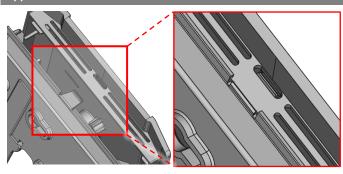


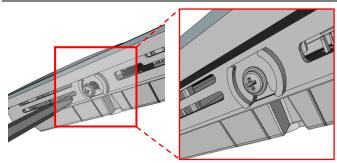


### Cable entry

There are predetermined breaking points for 2 optional cable entries on the underside of the base plate

On the upper side of the base plate there are 2 grits as position for a drill hole max. Ø 6 mm

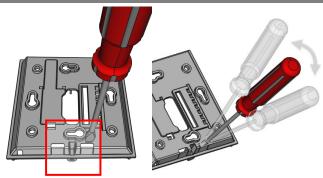

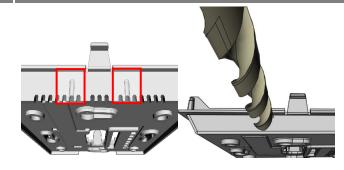



When using a drill, you should absolutely ensure that the base plate is firmly clamped. Before drilling, the pressure must be reduced and carefully drilled. A sudden break-through of the drill bit can be the result.

Issue date: 01.01.2024 page 5 / 7

### » CONNECTION PLAN

The following connection diagrams show the assignment of measuring values to analog outputs in factory default. Output variables reconfigurable via Thermokon NOVOSapp.

 
## Room sensor VOC - active V 0..10 V | A 4..20 mA

NOVOS 3 VOC VV	NOVOS 3 VOC A
-AOU1	-AOU1

### Room sensor VOC + temperature - active 2x V 0..10 V | 2x A 4..20 mA

NOVOS 3 VOC + Temp VV	NOVOS 3 VOC + Temp AA
-AOU2- Temperature   010 V	—AOI2—— Temperature   420 mA
-AOU1- VOC   010 V	—AOI1—— VOC   420 mA
-GND- 0 V⊥	—GND—— 0 V⊥
-UB+- 1535 V = / 1929 V ∼	—UB+—— 1535 V =

## Room sensor VOC + temperature + humidity - active 3xV 0..10 V




## **»** CONFIGURATION

The configuration is performed in powered state. The following options are available for configuring the device:

Device connection	Micro-USB	Micro-USB	
Configuration adapter	Thermokon USB-Interface	USB-Bluetooth Dongle	
	O UC	GET IT ON Google Play  Download on the App Store	
Confguration interface	PC/Notebook with uConfig software	Smartphone/Tablet with NOVOS App	
mondo	Parameterization partial via desktop PC/Notebook with uConfig software, via Thermokon USB-Interface*. Item No. 597838	Parameterization with mobile devices via Bluetooth and NOVOSapp. A separately available Bluetooth dongle* is required. Item no. 668262	
	! _, , ,, , , , ,, ,, ,, ,, ,, ,, ,, ,, ,	1	

 \*Commercially available Bluetooth dongles or USB to Micro-USB adapter cables are not compatible. You need a mobile device that supports at least Bluetooth version 4.1. The configuration app with the corresponding instructions can be downloaded from the Google Play Store or the Apple App Store.




Position of the micro USB port, see bottom of the device, for configuration with Bluetooth dongle or Thermokon USB-Interface

page 6 / 7 Issue date: 01.01.2024

### » DISPLAY

The display scales automatically depending on the device and the number of measured variables. Parameters such as the display/hiding of measured variables are changed via the app. The software and hardware versions are displayed during the boot process.

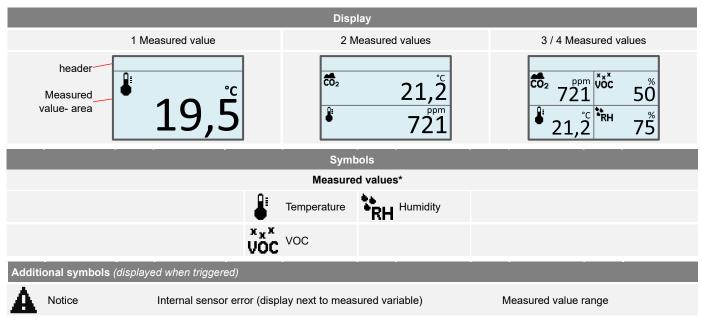

<sup>\*</sup>depending on variant

Issue date: 01.01.2024 page 7 / 7

### » PRODUCT TESTING AND CERTIFICATION



## **Declaration of conformity**


The declaration of conformity of the products can be found on our website https://www.thermokon.de/

### » NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

## » DIMENSIONS (MM)

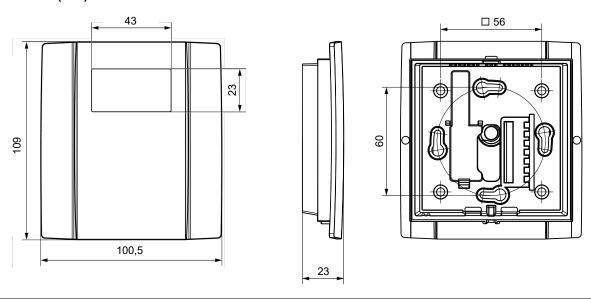

## » ACCESSORIES (OPTIONAL)

Rawlplugs and screws (2 pcs. each)

PSU-UP24 – flush mount power supply 24 V (AC Input: 100..240 V ~ | DC Output 24 V = 0,5 A)

Bluetooth dongle

Thermokon USB-Interface

Mounting bracket (surface mounted) white

Mounting bracket (surface mounted) black

Item No. 102209

Item No. 645737

Item No. 668262

Item No. 597838 Item No. 795050 Item No. 795074