

LCF02 2AO3DO RS485 Modbus

Fancoil controller (flush mounting)
valid from version 1.1.5

thermokon[®]
HOME OF SENSOR TECHNOLOGY

Datasheet

Subject to technical alteration
Issue date: 19.04.2023 • A125



» APPLICATION

The fancoil room controller has been designed for individual control of temperature in commercial, industrial and residential buildings. It is tailored for two-pipe fan coil with two-wire electric valves and has 2 analogue outputs 0..10 V (heating and cooling) and 3 relay outputs for controlling a 3-stage fan. A 6-way valve can also be used. With its flush mounted modern design the device combines digital technology with a large LCD display and additional buttons, which enables the single room controller to be used intuitively.

» SECURITY ADVICE – CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.



CAUTION! Risk of electric shock due to live components within the enclosure, especially devices with mains voltage supply (usually between 90..265 V).

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

» NOTES ON DISPOSAL



The crossed-out wheeled bin symbol indicates that the product or removable batteries must not be disposed of with household or commercial waste. Within the EU, you are legally obliged to dispose of the product separately and appropriately in accordance with the national laws of your country. Alternatively, please contact your supplier or Thermokon Sensortechnik GmbH. Further information can be found at: www.thermokon.com

» MOUNTING ADVISE ROOM SENSORS

The Accuracy of the room sensors are influenced by the technical specifications as well as the positioning and the installation type.

During Assembly:

- Seal mounting box (if present).
- Installation type, air draught, heat source, radiation heat or direct sunlight can affect the measurement.
- Building material specific properties of the installation place (*brick-, concrete-, partition wall, cavity wall, ...*) can affect the measurement. (e.g.: *Concrete accepts room temperature variation slower than cavity walls*)

Assembly not recommendet in...

- Air draught (e.g.: close to windows / doors / fans ...)
- Near heating sources,
- Direct sunlight
- Niches / between furniture / ...

» TECHNICAL DATA

| | | | |
|-----------------------|-----------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------|
| Measuring values | temperature | | |
| Output voltage | terminal 2 3 (for heating and cooling) 2x 0..10 V, min. load 10 kΩ | | |
| Output switch contact | terminal 5 6 7 – LO ME HI (for Fan) 3x normally open contact, max. 250 V ~ / 3 A max. 30 V = / 3 A | | |
| Network technology | RS485 Modbus, RTU, half-duplex, baud rate 4.800, 9.600, 19.200 or 38.400, parity: non (2 stopbits), even or odd (1 stopbit) | | |
| Power supply | 24 V = (±10%) 24 V ~ (±20%) SELV | | |
| Power consumption | 3 W (24 V =) | | |
| Measuring range temp. | +1..+50 °C | | |
| Accuracy temperature | ±1 K (typ. at 21 °C) | | |
| Inputs | terminal 10 input for external sensor NTC10K | terminal 11 – ESI DP input digital for floating contact, window contact, dew point sensor | terminal 12 - OCC input digital for floating contact, occupancy sensor, key card switch |
| Control functions | set point adjustment +1..+50 °C, (default +16..+30 °C) | | |
| Display | LCD 64x41 mm, white background lighting | | |
| Enclosure | ABS, pure white | | |
| Protection | IP20 according to EN 60529 | | |
| Cable entry | rear entry | | |
| Connection electrical | terminal block max. 1,5 mm ² | | |
| Ambient condition | -10..+50 °C, max. 95% rH non-condensing | | |
| Weight | 160 g | | |
| Mounting | flush mounted with standard EU box (Ø=60 mm) | | |


» PRODUCT TESTING AND CERTIFICATION



Declaration of conformity

The declaration of conformity of the products are available on our website
<https://www.thermokon.de/direct/en-gb/categories/lcf02>

» CONNECTION PLAN

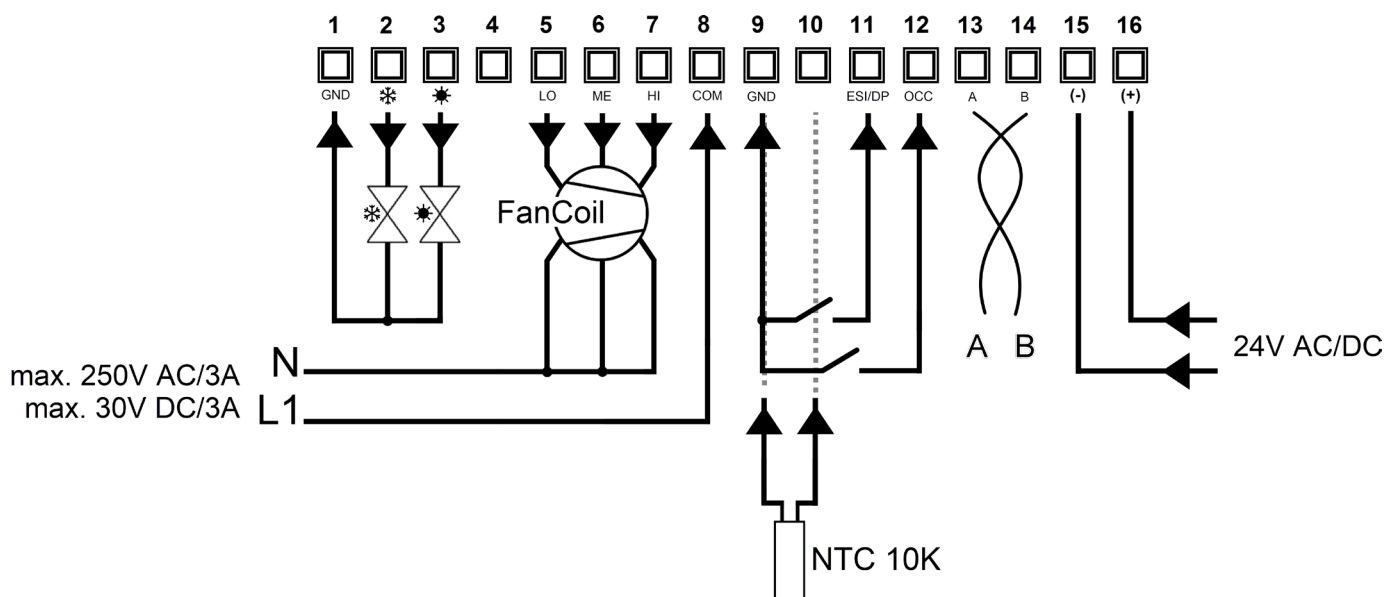

Power supply

When several BUS devices are supplied by one 24 V AC voltage supply, it is to be ensured that all "positive" operating voltage input terminals (+) of the field devices are connected with each other and all "negative" operating voltage input terminals (-) (=reference potential) are connected together (in-phase connection of field devices).


In case of reversed polarity at one field device, a supply voltage short-circuit would be caused by that device. The consequential short-circuit current flowing through this field may cause damage to it.

Therefore, pay attention to correct wiring.

Controller output signal

| | | 4-pipe (default) | 2-pipe | 6WV – 6-way valve |
|------------|----|------------------|-------------------|-------------------|
| Terminal 2 | ❄️ | Cooling | Heating & Cooling | Heating & Cooling |
| Terminal 3 | ☀️ | Heating | | |

» DISPLAY PANEL

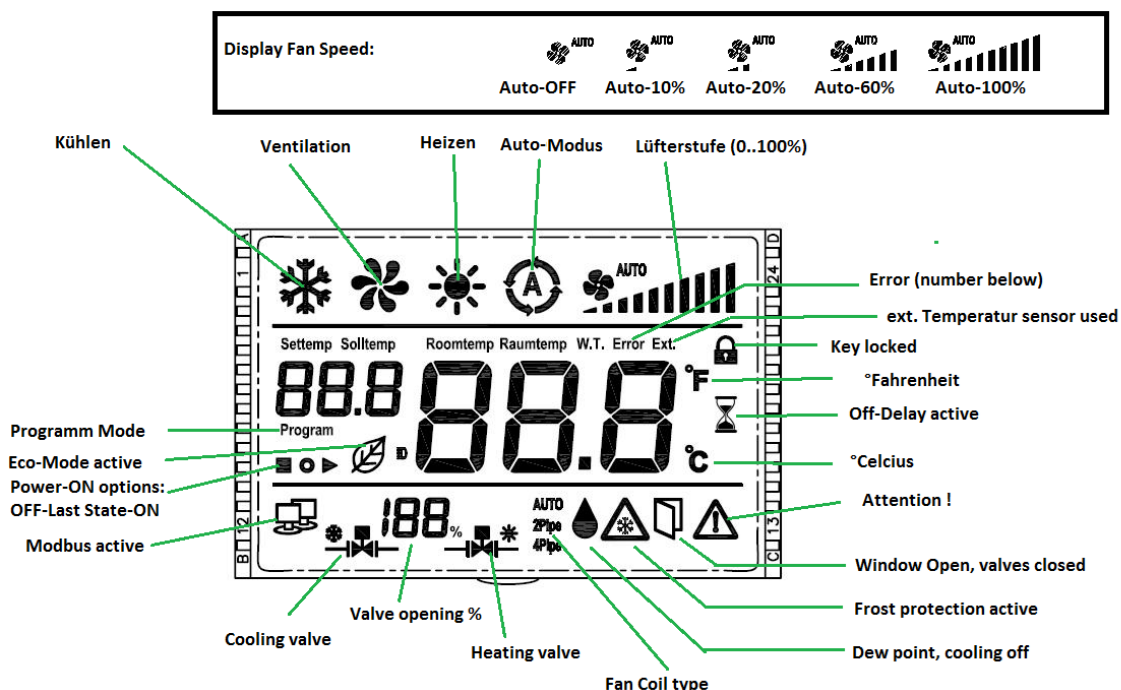


» FUNCTION DESCRIPTION

Communication factory default

| | | | |
|--------------------------|-------|-------------------------|------------|
| Modbus-adress: | 1 | | |
| Communication-interface: | RS485 | Communication-protocol: | Modbus-RTU |
| Baud Rate: | 9600 | Parity: | No parity |
| Data: | 8 bit | Stop: | 2 bit |

Device informationen

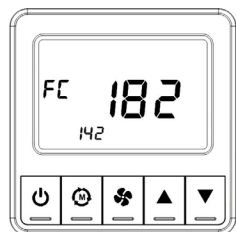

The device information (version and type number) are displayed on the start screen for a short time.

Communication



symbol flashes (If the device does not communicate via the bus, the symbol will be disappear after 10 seconds)

Parameter menu



To enter the parameter menu (i.e. for Modbus-communication settings):

- Press and hold "mode"-button for 5 seconds.
- Enter password: **(default: 987)**
 - o Digit selection: mode-button
 - o Arrow keys (▲/▼): increase / decrease value
- Select parameter with arrow keys



After parameter selection / setting, don't press any button for 3 seconds to save the settings.

| No. | Parameter | Description | default |
|-----|---------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| 1 | Modbus Adress | ID.1- ID.247 | 1 |
| 2 | Baud rate | 1 = 4800bps 2 = 9600 3 = 19200 4 = 38400 | 2 |
| 3 | Parity | 0 = none 1 = even 2 = odd | 0 |
| 4 | Stop Bits | 1 = 1 Stopbit 2 = 2 Stopbits | 2 |
| 5 | Temperature Offset internal sensor | -5,0 K..+5,0 K | 0 |
| 6 | Temperatur Offset external sensor | -5,0 K..+5,0 K | 0 |
| 7 | Piping system | 0 = 2-pipe 1 = 4-pipe | 1 |
| 8 | Factory reset | <ul style="list-style-type: none"> - Set parameter to 1 - Press mode key - Device is factory reset. <i>(Device stays in Parameter menu for Modbus configuration)</i> | 0 |


PI-controller 0..10 V

The manipulated variable is output as a proportional control signal. The type of valve used is set via the configuration registers.

6WV

With register address 304, a 6-way valve can also be selected as valve type. You can choose from 2..10 V / 2..10 V INV (Belimo), 0..10 V DN15 / DN15 INV, DN20 / DN20 INV (Sauter).

» OPERATING MODE

Press the "Mode Key" , to adjust the mode cyclically (Cooling > Ventilating > Auto mode > Heating ...).

In 2-pipe configuration not available modes (depending on the change-over sensor's signal) will be skipped. In this case the user can select the available modes only.

Standby / ECO / ON

The Power-Button switches the device from Stand-by to ON. In Standby the display is off, but the control loop is actively monitoring the temperature and will activate the heating output if the room temperature drops below the frost protection threshold.

Pressing the button once switches the display on and the device to ECO mode. In ECO mode it controls the room temperature to the setpoint predefined by register 275 and 276 (0x0113, 0x0114). The display will show the average of both ECO Setpoint Temperatures ($25+18/2=21,5$) and the leaf symbol to indicate the ECO mode. In ECO mode the setpoint is fixed and the device does not react to any button pressed by the user besides pressing the Stand-by /ECO/ON button a 2nd time. Then it will switch from ECO to comfort mode. To indicate that the Fancoil thermostat is in ECO mode it will show the leaf and the word ECO in the display.

In case an occupancy sensor is connected to one of the inputs the mode will change from ECO to Comfort as soon as the input becomes active and the previously used Setpoint will be restored and the leaf symbol will not be showing any more.


Temperature sensor input – temperature limiter and external sensor

The temperature sensor input (address 0x0152) can be used as change over sensor (addresses 0x012B and 0x012C) or as external temperature sensor.


Furthermore, it can also be used to limit the heating temperature (address 0x010A) and cooling temperature (address 0x010B). This is the case for floor heating systems, where the external sensor is embedded in the floor. In case the floor temperature will exceed a certain threshold the heating valve shall be closed to avoid damaging the floor or the pipes embedded in the floor.

Fan control

If the fan is configured to be 1-stage or 2-stage the selection will be adapted accordingly. In „ventilating mode“, the valves will be closed. If the fan

speed  is set to Auto the steps are switched depending on the temperature difference between the setpoint value and the current temperature value.

In auto mode heating or cooling, the fan level is calculated from the output of the PI loop (control variable).

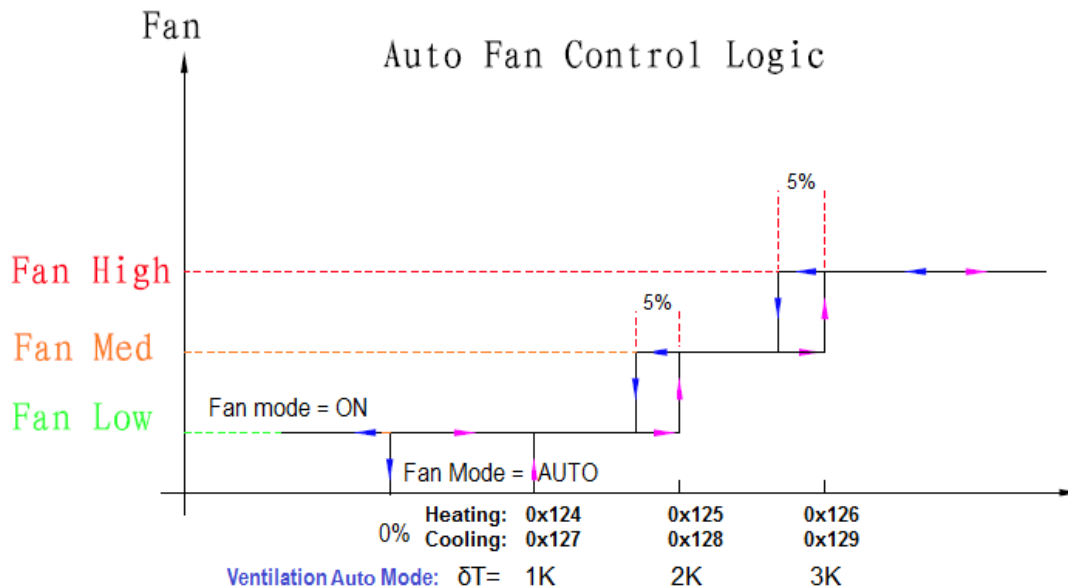

°F/°C selective

Temp display range is 32 °F..99 °F, respectively 0 °C..50 °C (factory default is °C). By simultaneously pressing the keys "▲" and "▼" the display of the unit system can be switched directly on the LCD.


Temperature offset correction (Register address 0x0106)

The internal sensor will be affected by the Thermostat's self-heating. As a consequence it would display a higher room temperature than the average of indoor temperature (real value). Item 5 & 6 of the parameter table does contain the correction of temperature offset (resolution 0,1 °C).

Set the Temperature set point range (Register address 0x0110 – 0x0112)

Press "▲" or "▼" key to adjust the temperature set point range. Factory default (°C) is 16 °C..30 °C, When °F has been selected Temp range is 60 °F..86 °F.

Key lock selection (Register address 0x010D)

If a key is pressed that is locked, the lock symbol  will appear for 2s and blink 2x but no further action is taken.

Power failure – Restart selection (Register address 0x010C)

Symbol Description



Keep thermostat switched OFF



Switch thermostat to last state before power failure (Record and Memorize)



Turn the thermostat ON

Storage during power loss

The status will be kept in EEPROM, while the power failure, so no data will be lost.

The setpoint is not saved. The standard setpoint after power-on reset applies, register address 271 (0x010F).

Occupancy (OCC)

If the input is configured for an Occupancy sensor. If the sensor indicates "UnOccupied" the current setpoint will be replaced by the Eco Mode Setpoint Temp. The display will show the leaf symbol and the lettering ECO to indicate the ECO mode. Once the room occupancy is detected again the previously used Setpoint will be restored and the leaf symbol will not be showing any more.

Window contact (ESI)

If the input is configured as window contact, the "Window open" Symbol will be displayed the thermostat will check every 3 seconds the input whether active. The cooling valve will be closed as long as the input will be active. The rest of the thermostat will work as usual, the user may change the setpoint or the fan stage, but the valve outputs will remain in valve closed position.



If configured the "Window open" or the Dew Point symbol will be flashing. When the input will not be active, the thermostat's outputs return to normal operation and operates the outputs normally.

Sensor failure alarm

In case room NTC temp sensor is open or short, thermostat switches fan to medium and the valve to 50% (5V output, 50%). The display will show (blinking) error code: "E1" Thermostat will allow to control fan manually as well as the valve output using the "▲" or "▼" keys. Every operation of the "▲" or "▼" keys will decrement / increment the output voltage by 1V = 10% AND the PWM by 10%. The percentage is shown in the display.

| Input Register | | | | |
|----------------|--------|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------|
| Address | Access | Description | Register value \triangle Value range | |
| 0 | 0x000 | R | Thermokon model identification | 0xFF02 \triangle LCF-2AO3DO |
| 1 | 0x0001 | R | Firmware-Version | e.g. 0x1110 \triangle 1.1.1 |
| 2 | 0x0002 | R | Back-Box Type | 23 \triangle 2AO3DO |
| 3 | 0x0003 | R | Value of the integrated temperature sensor °C / °F | 0..500 \triangle 0..50,0°C 300..1200 \triangle +30,0..+120,0°F |
| 4 | 0x0004 | R | Fan-State 0b00000000 = OFF 0b00000001 = Fan stage low 0b00000010 = Fan stage medium 0b00000100 = Fan stage high 0b00001000 = Auto OFF 0b00001001 = Auto low 0b00001010 = Auto medium 0b00001100 = Auto high | |
| 5 | 0x0005 | R | VA1 State – output valve 1 cooling | 0..1000 \triangle 0..100% |
| 6 | 0x0006 | R | VA2 State – output valve 2 heating | 0..1000 \triangle 0..100% |
| 7 | | | Reserved | |
| 8 | 0x0008 | R | External temperature sensor °C / °F | 200..+1000 \triangle -20,0..+100,0°C 0..2100 \triangle 0,0..+210,0°F |
| 9 | 0x0009 | R | Failure status 0x00= no failure 0x01= control loop temperature sensor alarm 0x02= external temperature sensor high limit alarm – (cablebreak) 0x04= external temperature sensor low limit alarm – (short circuit) 0x08= change over sensor missing alarm | |
| 10 | 0x000A | R | External input 1 – terminal 11 0 = Contact open, 1= Contact closed (i.e. window contact, dew point sensor) | 0..1 |
| 11 | 0x000B | R | External input 2 – terminal 12 0 = Contact open, 1= Contact closed (i.e. OCC Sensor, keycard-switch) | 0..1 |

| Holding Register | | | | | | |
|------------------|-----|--------|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------|--------------|
| Address | | Access | Description | Register value \triangle Value range | | Default |
| General settings | 256 | 0x0100 | R/W | Customer set Device location identification | 0..65535 | 0 |
| | 257 | 0x0101 | R/W | LCD temperature Unit 0 = °C 1 = °F (converted values) | 0..1 | 0 |
| | 258 | 0x0102 | R/W | Beeper Intensity 0=Off 1..5 (Volume) | 0..5 | 5 |
| | 259 | 0x0103 | R/W | Backlight intensity (operation) | 0..100 \triangle 0..100% | 80 |
| | 260 | 0x0104 | R/W | Reserved | | |
| | 261 | 0x0105 | R/W | Backlight operating delay setting | 1..255 \triangle 1..255 Sec. (on) | 15 |
| | 262 | 0x0106 | R/W | Internal Sensor Temperature Offset (added to measured value) | -50..50 \triangle -5,0..+5,0 [°C] -250..250 \triangle -25,0..+25,0 [°F] | 0 |
| | 263 | 0x0107 | R/W | external Sensor Temperature Offset (added to measured value) | -50..50 \triangle -5,0..+5,0 [°C] -250..250 \triangle -25,0..+25,0 [°F] | 0 |
| | 264 | 0x0108 | R/W | Display language 0= german 1= english | 0..1 | 0 |
| | 265 | 0x0109 | R/W | Individual passwords setting 001-999 default=987 000 = no password | 000..999 | 987 |
| | 266 | 0x010A | R/W | External temperature (limiter) sensor high limit (338=3, for limiter) | -200..1000 \triangle -20,0..+100,0 [°C] 0..2100 \triangle 0,0..+210,0 [°F] | 400 / 110 |
| | 267 | 0x010B | R/W | External temperature (limiter) sensor low limit (338=3, for limiter) | -200..1000 \triangle -20,0..+100,0 [°C] 0..2100 \triangle 0,0..+210,0 [°F] | 0 / 320 |
| | 268 | 0x010C | R/W | Power failure 0= keep off after power-on-reset 1= return to last state after power failure 2= switch on after power-on-reset | 0..2 | 1 |
| | 269 | 0x010D | R/W | Key-lock Once a locked key is pressed the LOCK symbol shall be displayed and blink twice. 0x00=unlocked 0x01=lock on/off 0x02=lock mode 0x08=lock fan speed 0x10=lock temp settings + / - 0x1F=lock all keystrokes | | 0 |
| | 270 | 0x010E | R/W | Display settings 0b00000001= show setpoint (if no setpoint is shown, keys are locked) 0b00000010= show room temperature 0b00000100 = show valve symbol 0b00001000 = show PI-loop percentage (if only room temperature or setpoint is shown, then in big numbers) | | 15 |

| Holding Register | | | | | | |
|--------------------|-----|--------|-------------|----------------------------------------------|----------------------------------------------------------------------------------|--------------|
| Address | | Access | Description | Register value \triangle value range | | default |
| Set-point settings | 271 | 0x010F | R/W | Default Setpoint after Power On Reset | 0..500 \triangle 0,0..+50,0 [°C] 300..1200 \triangle +30,0..+120,0 [°F] | 210 / 700 |
| | 272 | 0x0110 | R/W | Setpoint temperature lower limit | 0..500 \triangle 0,0..+50,0 [°C] 300..1200 \triangle +30,0..+120,0 [°F] | 160 / 600 |
| | 273 | 0x0111 | R/W | Setpoint temperature upper limit | 0..500 \triangle 0,0..+50,0 [°C] 300..1200 \triangle +30,0..+120,0 [°F] | 300 / 860 |
| | 274 | 0x0112 | R/W | Setpoint increment/decrement value | 1..100 \triangle 0,1..10,0 [°C] 1..500 \triangle 0,1..50,0 [°F] | 5 / 10 |
| | 275 | 0x0113 | R/W | ECO mode temperature setpoint cooling | 250..450 \triangle +25,0..45,0 [°C] 750..1100 \triangle +75,0..110,0 [°F] | 300 / 860 |
| | 276 | 0x0114 | R/W | ECO mode temperature setpoint heating | 120..240 \triangle +12,0..24,0 [°C] 50..750 \triangle +5,0..75,0 [°F] | 190 / 660 |

| Holding Register | | | | |
|------------------|--------|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------|
| Address | Access | Description | Register value \triangle Value range | default. |
| 277 | 0x0115 | R | Controller mode Comfort: 0b0000 0000= Controller off (frost protection active, LCD off) 0b0000 0001= Controller auto mode (heating & cooling) 0b0000 0010= Controller heating mode only 0b0000 0011= Controller cooling mode only 0b0000 0100= ventilating (PI-loop controls fan stages only, valves closed) Regler-Modus ECO: 0b0001 0000= Controller off (Frost protection active) 0b0001 0001= Controller auto mode (heating&cooling) 0b0001 0010= Controller heating mode only 0b0001 0011= Controller cooling mode only 0b0001 0100= ventilating (PI-loop controls fan stages only, valves closed) | 1 |
| 278 | 0x0116 | R/W | Fancoil Typ: 2- or 4-pipe 0b00000000=2-pipe: cooling + heating with change over 0b00000001=4-pipe: cooling + heating / (or if 6WV used) | 1 |
| 279 | 0x0117 | R/W | Fan stages and operation modes 0b00000000 = none (fan key is locked, the fan symbol will be faded on the LCD) 0bxxxx0001 = 1 fan stage 0bxxxx0010 = 2 fan stages 0bxxxx0011 = 3 fan stages 0b0001xxxx = During heating mode fan is disabled 0b0010xxxx = During cooling/ventilation mode fan is disabled 0b0011xxxx = during heating/ cooling mode fan is disabled | 3 |
| 280 | 0x0118 | R/W | Start fan at highest stage for (..) seconds 0..60 \triangle 0..60 Sek. | 0 |
| 281 | 0x0119 | R/W | Fan OFF-Delay 0= fan never stops 1..255 \triangle 1..255 Min after valve closing fan stops for .. minutes. | 15 |
| 283 | 0x011B | R/W | Deadband 1..100 \triangle 0,1..10,0 [°C] | 10 |
| 284 | 0x011C | R/W | Heating Proportional Band Xp_heat 1..100 \triangle 0,1..10,0 [°C] | 20 |
| 285 | 0x011D | R/W | Heating Integration Time Tn_heat 0..255 \triangle 0..255 Minuten | 30 |
| 286 | 0x011E | R/W | Cooling Proportional Band Xp_cool 1..100 \triangle 0,1..10,0 [°C] | 20 |
| 287 | 0x011F | R/W | Cooling Integration Time Tn_cool 0..255 \triangle 0..255 Minuten | 30 |
| 288 | 0x0120 | R/W | Minimal limit of the control variable heat 0..100 \triangle 0..100 % | 0 |
| 289 | 0x0121 | R/W | Maximal limit of the control variable heat 0..100 \triangle 0..100 % | 100 |
| 290 | 0x0122 | R/W | Minimal limit of the control variable cool 0..100 \triangle 0..100 % | 0 |
| 291 | 0x0123 | R/W | Maximal limit of the control variable cool 0..100 \triangle 0..100 % | 100 |
| 292 | 0x0124 | R/W | Fan stage 1 ON threshold control variable heat 0..100 \triangle 0..100 % | 5 |
| 293 | 0x0125 | R/W | Fan stage 2 ON threshold control variable heat 0..100 \triangle 0..100 % | 35 |
| 294 | 0x0126 | R/W | Fan stage 3 ON threshold control variable heat 0..100 \triangle 0..100 % | 70 |
| 295 | 0x0127 | R/W | Fan stage 1 ON threshold control variable cool 0..100 \triangle 0..100 % | 5 |
| 296 | 0x0128 | R/W | Fan stage 2 ON threshold control variable cool 0..100 \triangle 0..100 % | 35 |
| 297 | 0x0129 | R/W | Fan stage 3 ON threshold control variable cool 0..100 \triangle 0..100 % | 70 |
| 298 | 0x012A | R/W | Frost protection temperature threshold 50..150 \triangle +5,0..+15,0 °C 400..600 \triangle +40,0..+60,0 °F | 70/ 450 |
| 299 | 0x012B | R/W | Change-Over Temperature Threshold for Heating 0..500 \triangle 0..+50,0 °C 300..1200 \triangle +30,0..+120,0 °F | 300/ 860 |
| 300 | 0x012C | R/W | Change-Over Temperature Threshold for Cooling <i>(In case temperature is in between both thresholds the last state will be maintained)</i> 0..500 \triangle 0..+50,0 °C 300..1200 \triangle +30,0..+120,0 °F | 190/ 660 |
| 301 | | | Reserved | |
| 302 | | | Reserved | |
| 303 | | | Reserved | |
| 304 | 0x0130 | R/W | Valve type selection, heating + cooling 4= proportional (0V = 0% ..10V = 100%) 5= invers proportional (0V = 100% ..10V = 0%) 6= proportional Belimo 6 way 7= proportional Sauter 6 way with Ø15mm 8= proportional Sauter 6 way with Ø20mm 9= proportional Belimo 6 way, counter direction 10= proportional Sauter 6 way with Ø15mm, counter direction 11= proportional Sauter 6 way with Ø20mm, counter direction 12= no valve | 4 |

| Holding Register | | | | | |
|------------------|---------|--------|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------|
| | Address | Access | Description | Register value \triangle Value range | default |
| Inputs | 336 | 0x0150 | R/W | Configuration external input 1, terminal 11 0 = no function 1 = Occupancy sensor (Open = Occupied) 2 = Occupancy sensor (Closed = Occupied) 3 = Window contact (Open = Window Open) 4 = Window contact (Closed = Window Open) 5 = Disable heating (Open = Heating disabled) 6 = Disable heating (Closed = Heating disabled) 7 = Disable cooling (Open = Disable Cooling) 8 = Disable cooling (Closed = Disable Cooling) 9 = Dew Point Sensor (Open = Dewpoint crossed, disable cooling) 10 = Dew Point Sensor (Closed = Dewpoint crossed, disable cooling) | 0 |
| | 337 | 0x0151 | R/W | Configuration external input 2 0 = No function 1 = Occupancy sensor (Open = Occupied) 2 = Occupancy sensor (Closed = Occupied) 3 = Window contact (Open = Window Open) 4 = Window contact (Closed = Window Open) 5 = Disable heating (Open = Heating disabled) 6 = Disable heating (Closed = Heating Disabled) 7 = Disable cooling (Open = Disable Cooling) 8 = Disable cooling (Closed = Disable Cooling) 9 = Dew Point Sensor (Open = Dewpoint crossed, disable cooling) 10 = Dew Point Sensor (Closed = Dewpoint crossed, disable cooling) | 0 |
| | 338 | 0x0152 | R/W | Configuration Sensor Input 0 = none connected 1 = Change-Over Temp sensor (NTC10K) 2 = Ext. temp sensor (NTC10K) 3 = Temperature limiter | 0 |
| | 339 | 0x0153 | R/W | ESI (Energy Savings Input) – ON delay ON delay for ESI. Delays Energy stop by n seconds. | [s] 0 |
| | 340 | 0x0154 | R/W | Occupation (OCC-input) – OFF- delay | 0...65535 \triangle 0...65535 [s] 1800 |

| Holding Register (operation to override FC from modbus) | | | | | |
|---------------------------------------------------------|---------|--------|-------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| | Address | Access | description | Register value \triangle Value range | default |
| Special | 512 | 0x0200 | R/W | Active fan speed setting 0b00000000 = OFF 0b00000001 = Stage low 0b00000010 = Stage medium 0b00000100 = Stage high 0b00001000 = Auto OFF 0b00001001 = Auto low 0b00001010 = Auto medium 0b00001100 = Auto high | 0 |
| | 513 | 0x0201 | R/W | setpoint temperature 0..500 \triangle 0..+50,0 [°C] 300..1200 \triangle +30..+120,0 [°F] | 0 |
| | 514 | 0x0202 | R/W | Controller mode Comfort: 0b0000 0000= controller off (<i>Frost protection active</i>) 0b0000 0001= controller auto mode (<i>heating + cooling</i>) 0b0000 0010= controller heating mode only 0b0000 0011= controller cooling mode only 0b0000 0100=ventilating only (<i>PI loop controls fan stages only, valves closed</i>) Controller mode ECO: 0b0001 0000=Regler aus (Frostschutz aktiv) 0b0001 0001=Regler Automatik-Modus (<i>Heizen&Kühlen</i>) 0b0001 0010=Regler NUR Heizen 0b0001 0011=Regler NUR Kühlen 0b0001 0100=NUR Belüftung (<i>PI-Regler steuert die Lüfterstufen, Ventile sind geschlossen</i>) | 0 |
| | 515 | 0x0203 | R/W | Active symbols 0x00= show none 0x01= show ECO-leaf 0x02= show dew point 0x04= show frost protect 0x08= show window open 0x10= show attention symbol 0x20= show hourglass 0x40= show lock -symbol 0x80= show ECO-writing | 0 |

» MOUNTING ADVICE/ DIMENSIONS (MM)

For installing or maintenance, please make sure the power is disconnected. Fix the thermostat base plate to the wall through the four screw holes with distance between axes of 60 mm. Fasten base plate and front cover. Do not press the panel in order to protect LCD.

