# AGS55+ (LCD)

Outdoor temperature sensor



### **Datasheet**

Subject to technical alteration Issue date: 1/17/2024 • A121





## » APPLICATION

Sensor for outdoor temperature measurement: cold rooms, greenhouses, production plants and warehouses. Stainless Steel external probe for faster response.

#### »TYPES AVAILABLE

Outdoor sensor with display and temperature - active 0..10 V | 4..20 mA | relay

- AGS55+ LCD TRV MultiRange
- AGS55+ LCD TRA MultiRange
- AGS55+ LCD TRV MultiRange Relay

MultiRange: Measuring ranges adjustable at the transducer

## » SECURITY ADVICE - CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

## » PRODUCT TESTING AND CERTIFICATION





# **Declaration of conformity**

The declaration of conformity of the products are available on our website <a href="https://www.thermokon.de/direct/en-gb/categories/ags55plus">https://www.thermokon.de/direct/en-gb/categories/ags55plus</a>

## » NOTES ON DISPOSAL



The crossed-out wheelie bin symbol indicates that the product or removable batteries must not be disposed of with household or commercial waste. Within the EU, you are legally obliged to dispose of the product separately and appropriately in accordance with the national laws of your country. Alternatively, please contact your supplier or Thermokon Sensortechnik GmbH. Further information can be found at: <a href="https://www.thermokon.com">www.thermokon.com</a>

Page 2 / 4 Issue date: 1/17/2024

## » GENERAL REMARKS CONCERNING SENSORS

Especially with regard to passive sensors in 2-wire conductor versions, the wire resistance of the supply wire has to be considered. If necessary the wire resistance has to be compensated by the follow-up electronics. Due to self-heating, the wire current affects the measurement accuracy, so it should not exceed 1 mA.

When using lengthy connection wires (depending on the cross section used) the measuring result might be falsified due to a voltage drop at the common GND-wire (caused by the voltage current and the line resistance). In this case, 2 GND-wires must be wired to the sensor - one for supply voltage and one for the measuring current.

Sensing devices with a transducer should always be operated in the middle of the measuring range to avoid deviations at the measuring end points. The ambient temperature of the transducer electronics should be kept constant. The transducers must be operated at a constant supply voltage (±0,2 V). When switching the supply voltage on/off, onsite power surges must be avoided.

### » BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Temperature sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage  $(\pm 0, 2 \text{ V})$  this is normally done by adding or reducing a constant offset value. If a re-calibration should become necessary later directly on the sensor, this can be done by means of a trimming potentiometer on the sensor board. As Thermokon transducers work with a variable operating voltage, only one operating voltage can be taken into consideration, for reasons of production engineering. Transducers have a standard setting at an operating voltage of 24 V =. That means, that at this voltage, the expected measuring error of the output signal will be the least. For other operating voltages, the offset error will be increased by a changing power loss of the sensor electronics.

Remark: Occurring draft leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

### **»TECHNICAL DATA**

Measuring values	temperature	
Output voltage	010 V or 05 V, min. load 10k $\Omega$ (live-zero configuration via Thermokon USEapp)	
Output Amp (type-dependent)	TRA 420 mA, max. load $500Ω$	
Output switch contact (type-dependent)	Relay 2 floating contacts for 24 V ~ or 24 V = / 3 A	
Power supply (type-dependent)	<b>TRV</b> 1535 V = or 1929 V ~ SELV	<b>TRA</b> 1535 V = SELV
Power consumption	max. 2,5 W (24 V =)   4,3 VA (24 V ~)	
Output signal range temp. *Scaling analogue output	+40+240 °F (default setting), selectable from 8 temperature ranges-30+130   0+250   +40+140   0+150   +30+480   0+100   +40+240   +40+90 °F, optionally configurable via Thermokon USEapp	
Operating temperature range	Max. permissible operating temperature -4+158 °F	
Accuracy temperature	±0,5 K (typ. at 70 °F)	
Display	LCD 1.14x1.38 in. with RGB backlight	
Enclosure	enclosure USE-M, PC, pure white, cover PC, transparent, with removable cable entry	
Protection	IP65 according to EN 60529	
Cable entry (type-dependent)	<b>TRV   TRA</b> Flextherm M20, for wire max. Ø=0.180.35 in., removable	<b>Relay</b> M25 with fourfold cable entry for wire with max. Ø=0.28 in., removable
Connection electrical	removable plug-in terminal, max. 14 AWG	
Pocket	stainless steel V2A, Ø=0.24 in., L=1 in.	
Ambient condition	max. 85% rH short term condensation	


## »USE ENCLOSURE WITH UV AND WEATHER RESISTANCE

After some time, outdoor mounted plastics can lose their color and quality. Therefore, all USE housings are made of special white polycarbonate (PC). The light-stable colorants and additives are used to achieve optimum protection of the polymer while maintaining color stability. The titanium dioxide used is specially developed for polycarbonate and offers excellent UV protection through the reflection of the entire light spectrum including the UV component by 340 nm. This effectively counteracts the otherwise occurring photochemical polymer degradation. The colors stay full for a long time without fading. The material is also resistant to cold and frost.

Issue date: 1/17/2024 Page 3 / 4

## » MOUNTING ADVICES

In case of outdoor installation avoid direct rain and sun contact. Probably use sun respectively rain protection. Cable entry from bottom or side. For side cable routing set loop so that precipitation can drain defined. Observe permissible ambient condition.

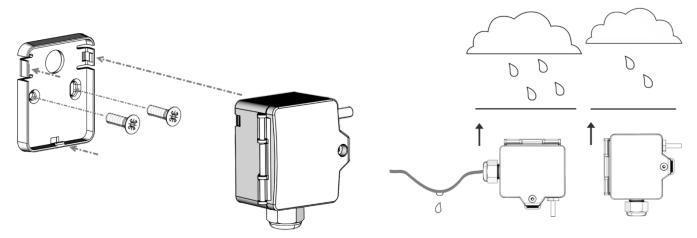

Regardless of the compass direction, the outdoor sensor should not be mounted in the following locations:

- on chimneys, under roofs, canopies or balconies
- in close proximity to an exhaust air opening
- above, below or next to windows and doors

### **»** CONFIGURATION



The Thermokon bluetooth dongle with micro-USB (Item No.: 668262) is required for communication between USEapp and USE-M / USE L products. Commercial bluetooth dongles are not compatible.



Application-specific reconfiguration of the devices can be carried out using the Thermokon USEapp. The configuration is carried out in the voltage-supplied state.



The configuration-app and the app description can be found in the Google Play Store or in the Apple App Store.


## » APPLICATION NOTICE



The Bluetooth dongle snaps into the socket easily. When removing, please fix the plug-in card (option PCB) so that it is not unintentionally pulled out.


## » CONNECTION PLAN


To change the output voltage range (default 0..10 V to 0..5 V) via jumper, the display must be removed from the board first. AGS55+ **LCD TRV MultiRange** 

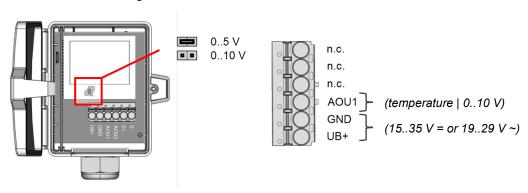


Page 4 / 4 Issue date: 1/17/2024


### AGS55+ LCD TRA MultiRange

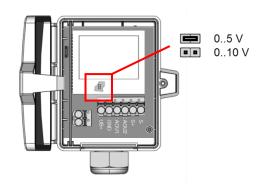


 


 


## AGS55+ LCD TRV MultiRange Relay

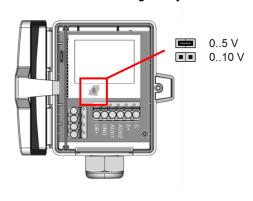


 


 

## » DIMENSIONS (IN.)

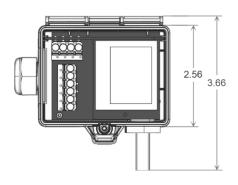

 

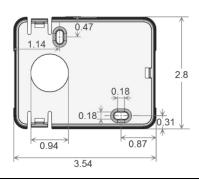

## » ACCESSORIES (INCLUDED IN DELIVERY)

Mounting base

Mounting kit universal

• Cover screw + screw cover• 2 Rawlplugs • 2 Screws (countersunk head) • 2 Screws (rounded head)

Item No. 631228 Item No. 698511

# » ACCESSORIES (OPTIONAL)

Bluetooth dongle Sealing insert M20 USE white,  $2x \varnothing = 0.28$  in. (for 2 wire; PU 10 pieces)

Item No. 668262 Item No. 641333