

# VFG54+ Basic RS485 Modbus

Contact temperature sensor

**thermokon**<sup>®</sup>  
HOME OF SENSOR TECHNOLOGY

## Datasheet

Subject to technical alteration  
Issue date: 11.10.2022 • A121



### » APPLICATION

Sensor with hinged lid enclosure USE for temperature measurement of pipes and round surfaces. Spring loaded brass contact sensor.

### » TYPES AVAILABLE

#### Contact sensor temperature – active BUS

- VFG54+ Basic RS485 Modbus

### » SECURITY ADVICE – CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

### » PRODUCT TESTING AND CERTIFICATION



#### Declaration of conformity

The declaration of conformity of the products are available on our website <https://www.thermokon.de/>.

### » NOTES ON DISPOSAL



As a component of a large-scale fixed installation, Thermokon products are intended to be used permanently as part of a building or a structure at a pre-defined and dedicated location, hence the Waste Electrical and Electronic Act (WEEE) is not applicable. However, most of the products may contain valuable materials that should be recycled and not disposed of as domestic waste. Please note the relevant regulations for local disposal.

## » GENERAL REMARKS CONCERNING SENSORS

Especially with regard to passive sensors in 2-wire conductor versions, the wire resistance of the supply wire has to be considered. If necessary the wire resistance has to be compensated by the follow-up electronics. Due to self-heating, the wire current affects the measurement accuracy, so it should not exceed 1 mA.

When using lengthy connection wires (depending on the cross section used) the measuring result might be falsified due to a voltage drop at the common GND-wire (caused by the voltage current and the line resistance). In this case, 2 GND-wires must be wired to the sensor - one for supply voltage and one for the measuring current.

Sensing devices with a transducer should always be operated in the middle of the measuring range to avoid deviations at the measuring end points. The ambient temperature of the transducer electronics should be kept constant. The transducers must be operated at a constant supply voltage ( $\pm 0,2$  V). When switching the supply voltage on/off, onsite power surges must be avoided.

## » BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage ( $\pm 0,2$  V) this is normally done by adding or reducing a constant offset value.

Thermokon transducers can be operated with variable operating voltages. The transducers are set at the factory with a reference operating voltage of 24 V =.


At this voltage, the expected measuring error of the output signal will be the least. Other operating voltages, can cause a measurement deviation changing power loss of the sensor electronics.

A recalibration can be carried out directly on the unit or via a software variable (app or bus).

**Remark: Occurring draught leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.**

## » MOUNTING ADVICES

The device is fixed using the tightening strap. Use contact fluid for better heat transfer between sensor and measuring medium. To avoid permeation of condensate, mount the sensor on top of the tube, if possible. The installation is possible in or across the direction of the pipe.

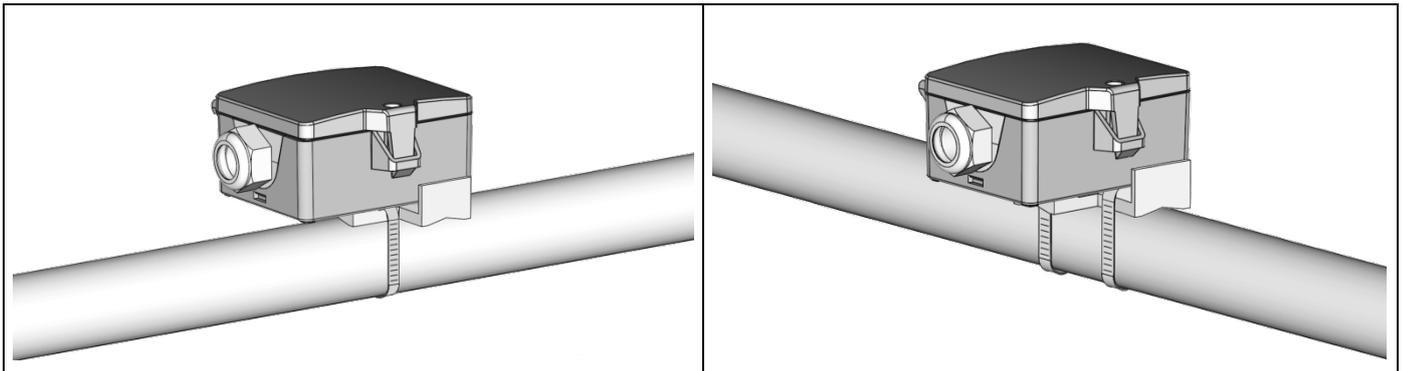


## » USE ENCLOSURE WITH UV AND WEATHER RESISTANCE

After some time, outdoor mounted plastics can lose their color and quality. Therefore, all USE housings are made of special white polycarbonate (PC). The light-stable colorants and additives are used to achieve optimum protection of the polymer while maintaining color stability. The titanium dioxide used is specially developed for polycarbonate and offers excellent UV protection through the reflection of the entire light spectrum including the UV component by 340 nm. This effectively counteracts the otherwise occurring photochemical polymer degradation. The colors stay full for a long time without fading. The material is also resistant to cold and frost.

» **TECHNICAL DATA**

Measuring values	temperature	
Network technology	RS485 Modbus, RTU or ASCII, half-duplex, baud rate 9.600, 19.200, 38.400 or 57.600, parity: non (2 stopbits), even or odd (1 stopbit), <b>Fail-safe Biasing required</b>	
Power supply	15..24 V = (±10%) or 24 V ~ (±10%) SELV	
Power consumption	max. 0,7 W (24 V =)   1,8 VA (24 V ~) SELV	
Operating temperature range * Max. permissible operating temperature	<b>sensor pocket   holder</b> -35..+120 °C	<b>enclosure   electronic</b> -35..+70 °C
Accuracy temperature	±0,5 K (typ. at 25 °C)	
Enclosure	enclosure USE-S, PC, pure white, UV resistant	
Protection	IP65 according to EN 60529, SI-Protection	
Cable entry	Flextherm M20, for wire Ø=4,5..9 mm, removable	
Connection electrical	removable plug-in terminal, max. 2,5 mm <sup>2</sup>	
Pocket	brass, spring loaded sensor	
Ambient condition	max. 85% rH short term condensation	
Mounting	can be mounted in line or transversely to the pipe	

» **CONNECTION PLAN AND CONFIGURATION**

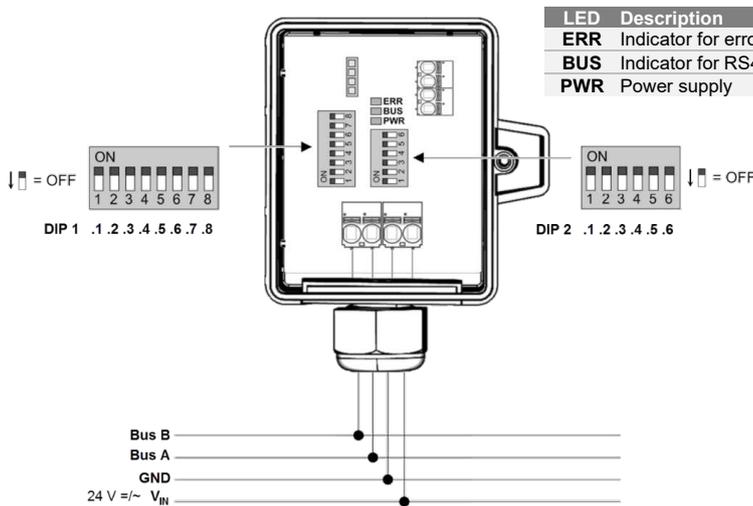

LED	Description
ERR	Indicator for error notification
BUS	Indicator for RS485 traffic
PWR	Power supply


**\* Power supply**

When several BUS devices are supplied by one 24 V AC voltage supply, it is to be ensured that all “positive” operating voltage input terminals (+) of the field devices are connected with each other and all “negative” operating voltage input terminals (-) (=reference potential) are connected together (in-phase connection of field devices). In case of reversed polarity at one field device, a supply voltage short-circuit would be caused by that device. The consequential short-circuit current flowing through this field may cause damage to it.



**Pay attention to correct wiring.**


**Dip switch block 1: Device Address binary coded (address range 1..247)**



\* factory default settings



**Dip switch block 2: Modbus interface settings**

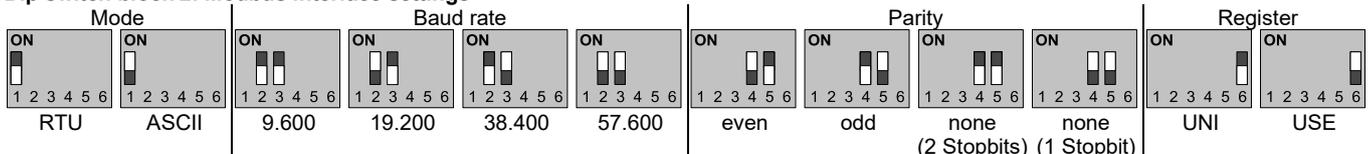

**Factory default**

Device address: 1 | RTU | Baud rate: 9.600 | Parity: even | Register addressing: USE

**Register compatibility to USE (Valid from firmware version 1.4, Jan. 2020)**

Via dipswitch 2.6 it is possible to change between the previous register addressing of the UNI-Modbus board to a USE compatible register assignment. The function of the device does not change.


**When using ASCII mode, parity must be set to EVEN or ODD. „No Parity“ (no) is not available in ASCII mode.**

**» RS485 MODBUS REGISTER****Variant 1 (UNI-Modbus) DIP 2.6 = OFF**

Data address	Function code	Description	Type
0 <sub>dec</sub>   0x0000 <sub>hex</sub>	3 (R)	Firmware z.B.: 0x1000 = Version 1.0.0.0	SIGNED 16 Bit
1 <sub>dec</sub>   0x0001 <sub>hex</sub>	4 (R/W)	Device Location	SIGNED 16 Bit
580 <sub>dec</sub>   0x244 <sub>hex</sub>	3 (R)	Temperature [1/100] °C	SIGNED 16 Bit
581 <sub>dec</sub>   0x245 <sub>hex</sub>	3 (R)	Temperature [1/100] °F	SIGNED 16 Bit
5 <sub>dec</sub>   0x0005 <sub>hex</sub>	4 (R/W)	Offset temperature [1/100] K	SIGNED 16 Bit

**Variant 2 (USE-Modbus) DIP 2.6 = ON**

Data address	Function code	Description	Type
503 <sub>dec</sub>   0x01F7 <sub>hex</sub>	3 (R)	Firmware version i.e.: 0x1300 = Version 1.3.0.0	SIGNED 16 Bit
400 <sub>dec</sub>   0x0190 <sub>hex</sub>	4 (R/W)	Unit system 1 = SI 2 = Imperial	SIGNED 16 Bit
0 <sub>dec</sub>   0x0000 <sub>hex</sub>	3 (R)	Temperature [1/10] °C/°F	SIGNED 16 Bit
100 <sub>dec</sub>   0x0100 <sub>hex</sub>	4 (R/W)	Offset temperature [1/10] K	SIGNED 16 Bit

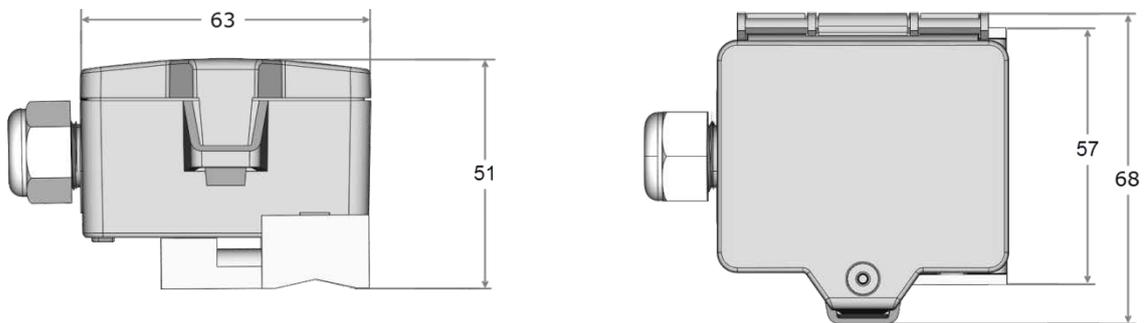**» DIMENSIONS (MM)****» ACCESSORIES (OPTIONAL)**

RS485 Biasing Adapter

USB RS485 Modbus RTU Logger

USB Interface RS485 (incl. driver CD)

Item No. 811378

Item No. 809917

Item No. 668293

Tension clamp for pipes Ø up to 110 mm with contact fluid

Tension clamp for pipes Ø up to 250 mm with contact fluid

Tightening strap PA for pipes Ø up to 100 mm with contact fluid

Sealing insert M20 USE white, 2x Ø=7 mm (for 2 wire; PU 10 pieces)

Item No. 658911

Item No. 648103

Item No. 668071

Item No. 641333