NOVOS 3 (EPD) CO2 + VOC

Room sensor for air quality with optional temperature and humidity



Datasheet

Subject to technical alteration Issue date: 18.06.2025 • A143





» APPLICATION

Room sensor for recording CO2 content and additionally temperature and humidity (relative, absolute, enthalpy, dew point). The maintenance-free sensor creates the conditions for a pleasant indoor climate and well-being. Typical applications are schools, office buildings, hotels, cinemas or similar. The device is available with additional LED display (traffic light function) with color change function for displaying the measured values. The threshold values can be individually configured via the Thermokon NOVOSapp.

»TYPES AVAILABLE

Room air quality sensor CO2 + VOC - active 2x 0..10 V | 2x4..20 mA

- NOVOS 3 CO2 + VOC VV*
- NOVOS 3 CO2 + VOC AA*

Room air quality sensor CO2 + VOC + temperature - active 3x 0..10 V

NOVOS 3 CO2 + VOC Temp 3xV*

Room air quality sensor CO2 + VOC + temperature + humidity – active 4xV 0..10 V

NOVOS 3 CO2 + VOC Temp_rH 4xV *

*Optional: TLF – traffic light function, RGB-LED indicating air quality | optional available with ePaper Display

» SECURITY ADVICE - CAUTION



The installation and assembly of electrical equipment should only be performed by authorized personnel.

The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

page 2 / 7 Issue date: 18.06.2025

»BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage (±0,2 V) this is normally done by adding or reducing a constant offset value.

Thermokon transducers can be operated with variable operating voltages. The transducers are set at the factory with a reference operating voltage of 24 V =.

At this voltage, the expected measuring error of the output signal will be the least. Other operating voltages, can cause a measurement deviation changing power loss of the sensor electronics.

A recalibration can be carried out directly on the unit or via a software variable (app or bus).

Remark: Occurring draught leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

» APPLICATION NOTICE FOR HUMIDITY SENSORS

At regular environmental condition, it is recommended to calibrate the sensor annually to check the compliance with the accuracy required in the application. The following conditions can damage the sensor element or lead in long therm to loss of the specified accuracy:

- Mechanical stress
- Contamination (e.g. dust / fingerprints)
- Aggressive chemicals
- Ambient conditions (e.g. condensation on measuring element)



Re-calibration or exchange of the sensor element are not subject of the general warranty.

» INFORMATION ABOUT SELF-CALIBRATION FEATURE CO2

All gas sensors are subject to drift. The degree of drift is dependent on the use of components and product design. In addition, the following environmental conditions, among others, can accelerate/ favor the aging and wear of the sensors:

- Mechanical stress (also due to temperature fluctuation)
- Contamination (dust / fingerprints e.g.)
- Abrasive chemicals
- Environmental influences (high humidity / condensation on measuring element)

An internal self calibration function with dual channel technology compensates the caused drift. Thermokon sensors are for permanent use (e.g. hospitals).

»INFORMATION ABOUT INDOOR AIR QUALITY CO2

EN 13779 defines several classes for indoor air quality:

Category	CO ₂ content above the content	in outdoor air in ppm	Description
	Typical range	Standard value	
IDA1	<400 ppm	350 ppm	Good indoor air quality
IDA2	400 600 ppm	500 ppm	Standard indoor air quality
IDA3	6001.000 ppm	800 ppm	Moderate indoor air quality
IDA4	>1.000 ppm	1.200 ppm	Poor indoor air quality

» APPLICATION NOTICE FOR AIR QUALITY SENSORS VOC

Volatile organic compunds (VOC) are gaseous and vaporous substances of organic origin in the air. VOC-sensors monitor the significant part of humanly olfactory sensed air quality. (e.g. body odur | tobacco smoke | odur of materials, furniture, carpets, paint, adhesives, ...)

The VOC-Value is an application-specific indication for air quality and doesn't provide any information about individual components of VOC

A VOC sensor oxidises the organic molecules that collide with it, which results in changing the resistance of the semiconductor.

Any contact with the sensitive sensors must be avoided and will invalidate the warranty.

The VOC Sensor is factory calibrated and can be calibrated via NOVOSapp subsequently, if needed.

Issue date: 18.06.2025 page 3 / 7

»TECHNICAL DATA

Sensor

» TECHNICAL DATA							
Measuring values	CO2 + VOC + temperature	(optional) + humidity (option	onal)				
Output voltage (type-dependent)	VV $3xV$ $4xV$ $2x/3x/4x$ 010 V or 05 V, min load 10 k Ω (live-zero configuration $110/210$ V) configurable via Thermokon NOVOSapp						
Output Amp (type-dependent)	AA 2x 420 mA, max. load 500 Ω						
Power supply (type-dependent)	VV 3xV 4xV 1535 V = or 1929 V ~ Si	ΞLV	AA 1535 V = SELV				
Power consumption (type-dependent)	VV 3xV 4xV typ. 0,4 W (24 V =) 0,8 VA (24 V ~)		AA max. 0,5 W / 24 V =				
Display (optional)	ePaper, as measured value display, display can be parameterized via Thermokon NOVOSapp						
Enclosure	PC V0, pure white, design cover (optional)						
Protection	IP20 according to DIN EN 60529						
Cable entry	rear entry, breaking points bottom, drill mark top						
Connection electrical	tool-free mountable spring terminal, max. AWG16						
Ambient condition	050 °C, max. 85% non-condensing						
Mounting	surface mounted on flush-mounting box (\emptyset =2.36in. 60 mm) or to be mounted flat onto the surface using screws, base part can be mounted and wired separately						
Notes	mixed gas sensors detect gases and vapours which can be oxidised (burnt): Body odours, tobacco smoke, exhalations emitted by materials (furniture, carpets, paint, glue)						
» Temperature (optional)							
Output signal range temp. *scaling analogue output	0+50 °C (default setting), selectable from 4 temperature ranges -50+50 0+50 -15+35 -20+80 °C, configurable via NOVOSapp						
Accuracy temperature (type-dependent)	±0,5K (typ. at 21 °C)						
» Humidity (optional)							
Measuring range humidity	relative humidty (default) 0100% rH	Enthalpy 085 KJ/kg	absolute humidity 050 080 g/m³	dew point 0+50 -20+80 °C			
	configurable via Thermoko	n NOVOSapp					
Accuracy humidity	±2% between 1090% rH (typ. at 21 °C)						
»CO2	»CO2						
Measuring range CO2	02000 ppm 05000 ppm (optional configurable via Thermokon NOVOSapp)						
Accuracy CO2	±50 ppm+ 3 % of reading (typ. at 21 °C, 50% rH, 1015 hPa)						
Calibration	self-calibration, CO2: Dual Channel						
Sensor	NDIR (non-dispersive, infrared)						
Display (optional)	RGB-LED indicating air quality (CO2, traffic light function 'TLF'), optional						
» VOC							
Measuring range VOC 0100 %							

VOC sensor (heated metal oxide semiconductor)

page 4 / 7 Issue date: 18.06.2025

» MOUNTING ADVICES

The Accuracy of the room sensors are influenced by the technical specifications as well as the positioning and the installation type.

During Assembly:

- Seal mounting box (if present).
- Installation type, air draught, heat source, radiation heat or direct sunlight can affect the measurement.
- Bulding material specific properties of the installation place (brick-, concrete-, partition wall, cavity wall, ...) can affect the measurement.

Assembly not recommendet in...

- Air draught (e.g.: close to windows / doors / fans ...)
- Near heating sources,
- · Direct sunlight
- Niches / between furniture / ...

Please make sure that the device is de-energized if you want to install it!


The installation can be performed on the flat wall surface or on a flush-mounted box. A representative place should be selected. Sunshine and draft, e.g. in the installation tube should be avoided, so that the measurement result is not falsified. Seal the end of the installation tube.


- For wiring, the upper part of the device must be removed from the base plate. Base plate and upper part are detachably connected to each other by means of locking lugs.
- The mounting of the base plate on the flat wall surface is done with rawplugs and screws.
- Finally, the device is attached to the base plate and fixed with the screw.

Housing open / close

Snap the upper part of the housing into the locking lug on the upper side

Fix the upper part of the housing on the underside with the screw

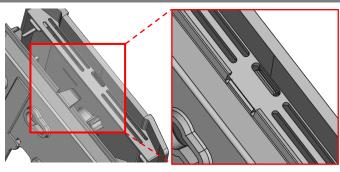


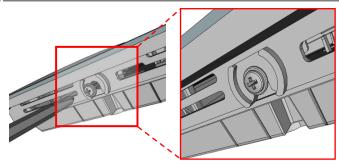


Cable entry

There are predetermined breaking points for 2 optional cable entries on the underside of the base plate

On the upper side of the base plate there are 2 grits as position for a drill hole max. \emptyset 6 mm

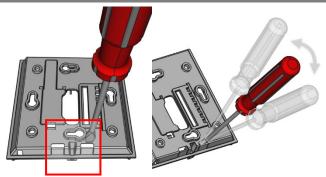

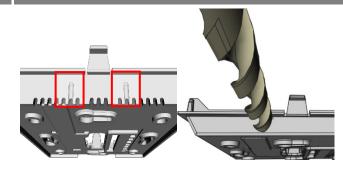



When using a drill, you should absolutely ensure that the base plate is firmly clamped. Before drilling, the pressure must be reduced and carefully drilled. A sudden break-through of the drill bit can be the result.

Issue date: 18.06.2025 page 5 / 7


» CONNECTION PLAN

The following connection diagrams show the assignment of measuring values to analog outputs in factory default. Output variables reconfigurable via Thermokon NOVOSapp.

Room sensor CO2 + VOC - active 2x 0..10 V | 2x 4..20 mA

0 V⊥

15..35 V = / 19..29 V ~

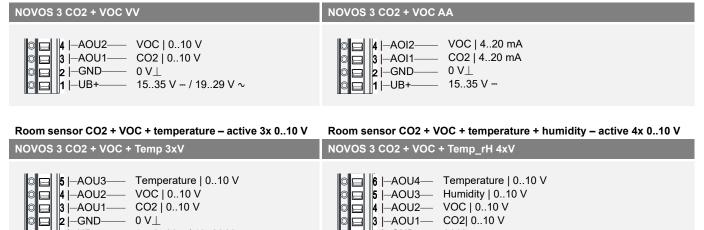

3 |-AOU1--

2 |-GND-

-UB+

CO2| 0..10 V


15..35 V = / 19..29 V ~

0 V⊥


» CONFIGURATION

-UB+

The configuration is performed in powered state. The following options are available for configuring the device:

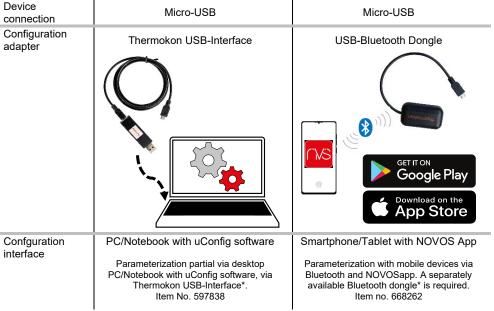

*Commercially available Bluetooth dongles or USB to Micro-USB adapter cables are not compatible. You need a mobile device that supports at least Bluetooth version 4.1. The configuration app with the corresponding instructions can be downloaded from the Google Play Store or the Apple App Store.




Position of the micro USB port, see bottom of the device, for configuration with Bluetooth dongle or Micro-USB programming interface

page 6 / 7 Issue date: 18.06.2025

» DISPLAY

The display scales automatically depending on the device and the number of measured variables. Parameters such as the display/hiding of measured variables are changed via the app. The software and hardware versions are displayed during the boot process.

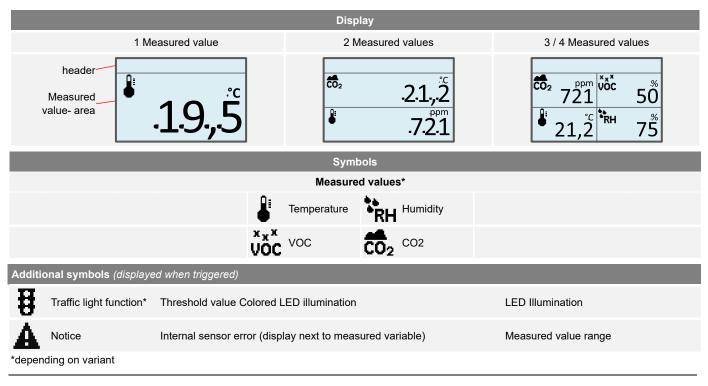

»TLF – TRAFFIC LIGHT FUNCTION (OPTIONAL)

The traffic light function can be implemented with any available measured variable. Different colors can be assigned for up to 5 different measuring ranges.

Example: CO2 TLF

The LED visualizes the air quality value (Thresholds optionally configurable via Thermocon NOVOSapp).



CO2 (factory default)	Behavior of the LED
0750 ppm	LED lights up in green
7511250 ppm	LED lights up in yellow
12512000 ppm	LED lights up in red

Issue date: 18.06.2025 page 7 / 7

» PRODUCT TESTING AND CERTIFICATION





Declaration of conformity


The declaration of conformity of the products can be found on our website https://www.thermokon.de/direct/en-gb/categories/novos-3

» NOTES ON DISPOSAL



The crossed-out wheelie bin symbol indicates that the product or removable batteries must not be disposed of with household or commercial waste. Within the EU, you are legally obliged to dispose of the product separately and appropriately in accordance with the national laws of your country. Alternatively, please contact your supplier or Thermokon Sensortechnik GmbH. Further information can be found at: www.thermokon.com

» DIMENSIONS (MM)

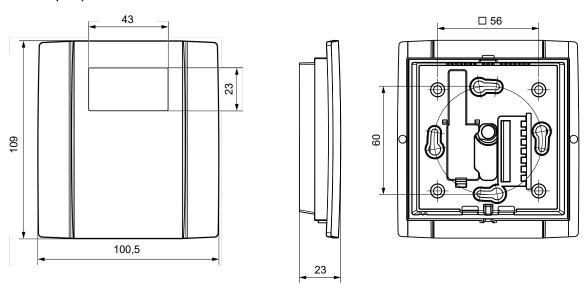

» ACCESSORIES (OPTIONAL)

Rawlplugs and screws (2 pcs. each)

PSU-UP24 – flush mount power supply 24 V (AC Input: 100..240 V \sim | DC Output 24 V = 0,5 A)

Bluetooth dongle Thermokon USB-Interface Mounting bracket (surface mounted) white Mounting bracket (surface mounted) black Item No. 102209 Item No. 645737

Item No. 668262 Item No. 597838 Item No. 795050 Item No. 795074