# LA+ CO2 (LCD) (Temp\_rH)

Outdoor sensor for air quality



#### **Datasheet**

Subject to technical alteration Issue date: 27.03.2024 · A140



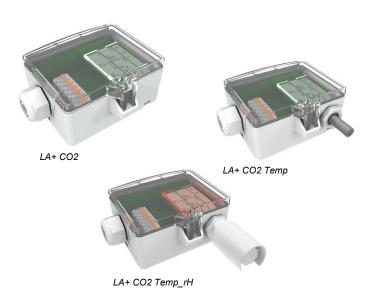


Illustration similar, depending on the type

## » APPLICATION

Sensor for outdoor CO2 measurement optional temperature and humidity: cold rooms, greenhouses, production plants and warehouses. Designed for outdoor mounted applications with 0..10 V or 4..20 mA output. LCD models with RGB background light have a transparent cover. Display configuration and threshold values for color changes can be parameterized via Thermokon USEapp. With the option board relay two-point controllers or a 2-stage 2-point controller for temperature or humidity can be realized.

### »TYPES AVAILABLE

Outdoor sensor CO2 optional with LCD - active 1x 0..10 V | 1x 4..20 mA

LA+ CO2 (LCD) V

LA+ CO2 (LCD) A

Outdoor sensor CO2 + temp optional with LCD - active 2x 0..10 V | 2x 4..20 mA | Relay

LA+ CO2 (LCD) Temp VV

LA+ CO2 (LCD) Temp AA

LA+ CO2 (LCD) Temp VV Relay

Outdoor sensor CO2 + temp +rH (opt.) optional with LCD - active 3x 0..10 V

LA+ CO2 (LCD) Temp\_rH 3xV

Options: additional passive temperature sensor

eg: PT100/PT1000/NI1000/NI1000TK5000/NTC10K... and other sensors on request.

# » SECURITY ADVICE - CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

### » PRODUCT TESTING AND CERTIFICATION





#### Declaration of conformity

The declaration of conformity of the products are available on our website <a href="https://www.thermokon.de/direct/en-gb/categories/laplus">https://www.thermokon.de/direct/en-gb/categories/laplus</a>

Page 2 / 4 Issue date: 27.03.2024

#### » NOTES ON DISPOSAL



The crossed-out wheelie bin symbol indicates that the product or removable batteries must not be disposed of with household or commercial waste. Within the EU, you are legally obliged to dispose of the product separately and appropriately in accordance with the national laws of your country. Alternatively, please contact your supplier or Thermokon Sensortechnik GmbH. Further information can be found at: <a href="https://www.thermokon.com">www.thermokon.com</a>

### »BUILD-UP OF SELF-HEATING BY ELECTRICAL DISSIPATIVE POWER

Sensors with electronic components always have a dissipative power, which affects the temperature measurement of the ambient air. The dissipation in active temperature sensors shows a linear increase with rising operating voltage. This dissipative power has to be considered when measuring temperature. In case of a fixed operating voltage (±0,2 V) this is normally done by adding or reducing a constant offset value.

Thermokon transducers can be operated with variable operating voltages. The transducers are set at the factory with a reference operating voltage of 24 V =.

At this voltage, the expected measuring error of the output signal will be the least. Other operating voltages, can cause a measurement deviation changing power loss of the sensor electronics.

A recalibration can be carried out directly on the unit or via a software variable (app or bus).

Remark: Occurring draught leads to a better carrying-off of dissipative power at the sensor. Thus temporally limited fluctuations might occur upon temperature measurement.

### »INFORMATION ABOUT INDOOR AIR QUALITY CO2

EN 13779 defines several classes for indoor air quality:

Category	CO <sub>2</sub> content above the content in outdoor air in ppm		Description
	Typical range	Standard value	
IDA1	<400 ppm	350 ppm	Good indoor air quality
IDA2	400 600 ppm	500 ppm	Standard indoor air quality
IDA3	6001.000 ppm	800 ppm	Moderate indoor air quality
IDA4	>1.000 ppm	1.200 ppm	Poor indoor air quality

#### »INFORMATION ABOUT SELF-CALIBRATION FEATURE CO2

All gas sensors are subject to drift. The degree of drift is dependent on the use of components and product design. In addition, the following environmental conditions, among others, can accelerate/ favor the aging and wear of the sensors:


- · Mechanical stress (also due to temperature fluctuation)
- Contamination (dust / fingerprints e.g.)
- Abrasive chemicals
- Environmental influences (high humidity / condensation on measuring element)

An internal self calibration function with dual channel technology compensates the caused drift. Thermokon sensors are for permanent use. (e.g. hospitals).

# » APPLICATION NOTICE FOR HUMIDITY SENSORS

At regular environmental condition, it is recommended to calibrate the sensor annually to check the compliance with the accuracy required in the application. The following conditions can damage the sensor element or lead in long therm to loss of the specified accuracy:

- Mechanical stress
- Contamination (e.g. dust / fingerprints)
- Aggressive chemicals
- Ambient conditions (e.g. condensation on measuring element)

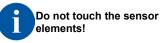

Re-calibration or exchange of the sensor element are not subject of the general warranty.

### » CONFIGURATION



The Thermokon bluetooth dongle with micro-USB (Item No.: 668262) is required for communication between USEapp and USE-M / USE L products. Commercial bluetooth dongles are not compatible.



Application-specific reconfiguration of the devices can be carried out using the Thermokon USEapp. The configuration is carried out in the voltage-supplied state.



The configuration-app and the app description can be found in the Google Play Store or in the Apple App Store.

# » APPLICATION NOTICE



The Bluetooth dongle snaps into the socket easily. When removing, please fix the plug-in card (option PCB) so that it is not unintentionally pulled out.


Page 3 / 4

### »TECHNICAL DATA

Measuring values	CO2, temperature + humidity (depending on the device	e)		
Output voltage	14x 010 V or 05 V, min. load 10 kΩ (live-zero configuration via Thermokon USEapp)			
Output Amp (type-dependent)	<b>A   AA</b> 12x 420 mA, max. load 500 Ω			
Output passive (type-dependent)	Passive Options: additional passive temperature sensor eg: PT100/PT1000/NI1000/NI1000TK5000/NTC10K and other sensors on request			
Output switch contact (type-dependent)	Relay 2 floating contacts for 24 V ~ or 24 V = / 3 A			
Power supply (type-dependent)	<b>V   VV   3xV   Relay</b> 1535 V = or 1929 V ~ SELV	<b>A   AA</b> 1535 V = SELV		
Power consumption	max. 2,3 W (24 V =)   max. 4,3 VA (24 V ~)			
Measuring range temp. (type-dependent)	VV   3xV 0+50 °C (default setting)   +40+140 °F , optionally c	<b>V</b> C (default setting)   +40+140 °F , optionally configured via Thermokon USEapp		
Measuring range humidity (type-dependent)				
Measuring range CO2	02000 ppm (default), 05000 ppm (optionally configured via Thermokon USEapp)			
Accuracy temperature (type-dependent)	<b>VV   AA   3xV   Relay</b> ±0,5 K (typ. at 21 °C   70 °F)	passive depending on used sensor		
Accuracy humidity (type-dependent)	<b>3xV</b> ±2% between 1090% rH (typ. at 21 °C   70 °F)			
Accuracy CO2	±50 ppm +3% of reading (typ. at 21 °C, 50% rH)			
Calibration	self-calibration, Dual Channel			
Sensor	CO2 NDIR (non-dispersiv, infrared)			
Display (optional)	LCD 29x35 mm   1.14x1.38 in. with RGB backlight			
Enclosure	enclosure USE-M, PC, pure white, cover PC, transparent, with removable cable entry			
Protection	IP65 according to EN 60529			
Cable entry (type-dependent)	V   VV   A   AA   3xV Flextherm M20, for wire Ø=4,59 mm   0.180.35 in., removable	<b>Relay</b> M25 with fourfold cable entry for wire with max. Ø=7 mm   0.28 in., removable		
Connection electrical	removable plug-in terminal, max. 2,5 mm²   14 AWG			
Ambient condition	bient condition 0+50 °C   +32+122 °F, max. 85% rH short term condensation			
Mounting	installation is also possible using mounting base			


# » CONNECTION PLAN

To change the output voltage range (default: 0..10 V to 0..5 V) via jumper, the display must be removed from the board. Optionally, the manufacturer can install a passive sensor in the unit. This is read out via ST+ ST-.

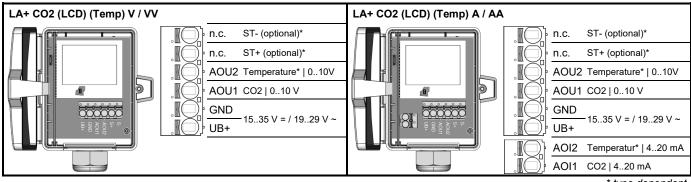


\* type dependent

Page 4 / 4 Issue date: 27.03.2024

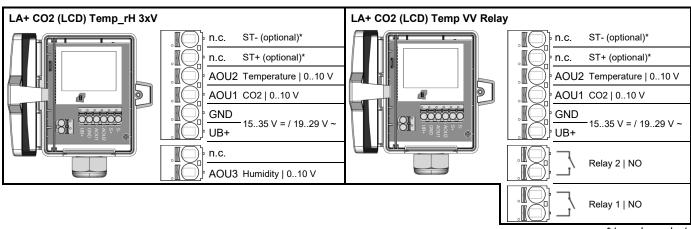

\* type dependent

# » DIMENSIONS MM (INCH)

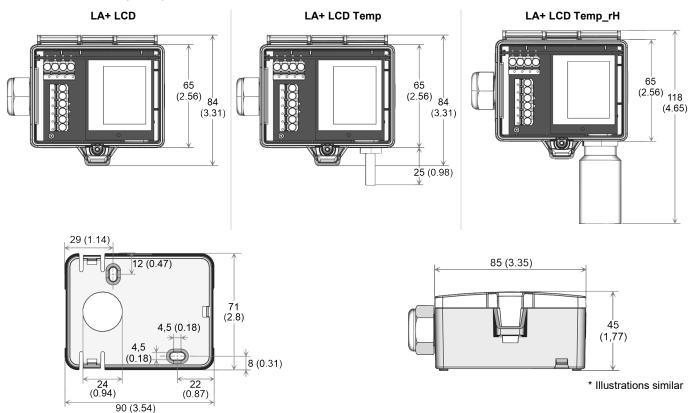

# » ACCESSORIES (INCLUDED IN DELIVERY)

Mounting base Item No. 631228 Mounting kit universal Item No. 698511

• Cover screw + screw cover• 2 Rawlplugs • 2 Screws (countersunk head) • 2 Screws (rounded head)

# » ACCESSORIES (OPTIONAL)

Sealing insert M20 USE white, 2x Ø=7 mm | 0.28 in. (for 2 wire; PU 10 pieces)

Item No. 641333