# DPA+ (LCD) RS485 Modbus


Differential Pressure Transmitter



#### **Datasheet**

Subject to technical alteration Issue date: 06.03.2025 • A141



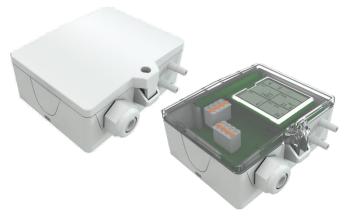

The following illustrations show the version with LCD

### » APPLICATION

Differential pressure and volume flow transducer for monitoring differential pressure and volume flow of air and other non-flammable and non-aggressive gases. Three types with eight different measuring ranges are available for different applications. In addition to differential pressure all variants provide the calculated volume flow as second analog output signal. LCD models with RGB background light have a transparent cover. Display configuration, k-values for flow calculation (default 1500) and threshold values for color changes can be parameterized via Thermokon USEapp. The mounting base (included in delivery) allows mounting on a level surface or mounting on DIN rail TS35 (35x7,5 mm) according to EN 60715.

#### »TYPES AVAILABLE

Differential pressure and volume flow transducer with display - RS485 Modbus

- DPA250+ (LCD) RS485 Modbus MultiRange <AZ>
- DPA2500+ (LCD) RS485 Modbus MultiRange <AZ>
- DPA7000+ (LCD) RS485 Modbus MultiRange <AZ>

#### Differential pressure and volume flow transducer with 2 digital inputs, optional with display-RS485 Modbus

- DPA250+ (LCD) RS485 Modbus MultiRange <AZ> 2IN
- DPA2500+ (LCD) RS485 Modbus MultiRange <AZ> 2IN
- DPA7000+ (LCD) RS485 Modbus MultiRange <AZ> 2IN

MultiRange: Measuring ranges adjustable at the transducer | <AZ>: automatic zero-point adjustment (optional)

### » PRODUCT TESTING AND CERTIFICATION





#### **Declaration of conformity**

The declaration of conformity of the products are available on our website <a href="https://www.thermokon.de/direct/en-gb/categories/dpaplus">https://www.thermokon.de/direct/en-gb/categories/dpaplus</a>

# » NOTES ON DISPOSAL



The crossed-out wheelie bin symbol indicates that the product or removable batteries must not be disposed of with household or commercial waste. Within the EU, you are legally obliged to dispose of the product separately and appropriately in accordance with the national laws of your country. Alternatively, please contact your supplier or Thermokon Sensortechnik GmbH. Further information can be found at: <a href="https://www.thermokon.com">www.thermokon.com</a>

Page 2 / 7 Issue date: 06.03.2025

#### » SECURITY ADVICE - CAUTION

The installation and assembly of electrical equipment should only be performed by authorized personnel.



The product should only be used for the intended application. Unauthorised modifications are prohibited! The product must not be used in relation with any equipment that in case of a failure may threaten, directly or indirectly, human health or life or result in danger to human beings, animals or assets. Ensure all power is disconnected before installing. Do not connect to live/operating equipment.

Please comply with

- · Local laws, health & safety regulations, technical standards and regulations
- Condition of the device at the time of installation, to ensure safe installation
- This data sheet and installation manual

Before installation, commissioning and operation, make sure that the correct pressure gauge has been selected with regard to measuring range, design and, based on the specific measuring conditions, the suitable medium in contact with the medium. Pressure gauges may only be installed and serviced by trained specialist personnel authorized by the plant operator. Failure to observe the relevant regulations may result in serious physical injury and/or damage to property.


#### » TECHNICAL DATA differential pressure, volume flow Measuring values air or other non-flammable/non-aggressive gases Medium 0..10 V or 0..5 V, min. load $10 \text{ k}\Omega$ Output voltage (live-zero configuration via Thermokon USEapp) RS485 Modbus, RTU, half-duplex, baud rate 9.600, 19.200, 38.400 or 57600, parity: none (2 stopbits), **Network technology** even or odd (1 stopbit), Fail-safe Biasing required 15..35 V = or 19..29 V ~ SELV Power supply max. 2,3 W (24 V =) | max. 4,3 VA (24 V ~) Power consumption 0... 750.000 m³/h (default), optionally configured via Thermokon USEapp Measuring range velocity type 2500 type 7000 type 250 Measuring range pressure \*selectable at the device 0..+1000 | 0..+1500 | 0..+2000 | -100..+100 | 0..+100 | 0..+250 | 0..+25 | 0..+50 | 0..+100 | 0..+250 | -25..+25 | -50..+50 | -0..+500 | 0..+1000 | 0..+1500 | 0..+2500 | 0..+3000 | 0..+4000 | 0..+2000 | 0..+2500 Pa 100..+100 | -150..+150 Pa 0..+5000 | 0..+7000 Pa at range <250 Pa: ±1 Pa at range <500 Pa: ±5 Pa, at range <2000 Pa: ±10 Pa, Accuracy pressure \*deviation from calibration reference device (calibrator) at range >500 Pa: ±10 Pa at range >2000 Pa: ±25 Pa Zero-point adjustment 3 month at range <500 Pa: 6 month 12 month at range >500 Pa: 12 month Zero-point adjustment (automatic) automatic zero-point adjustment (optional) 40 kPa Max. working overpressure Inputs 2x input for NTC10k or floating contact (optional) MEMS membrane measuring element Sensor LCD 29x35 mm with RGB backlight Display units, pressure: Pa, inchWC, volume flow: m3/h, cfm (configurable) (optional) enclosure USE-L, PC, pure white, with removable cable entry, with LCD: cover PC, transparent, **Enclosure UV** resistant IP65 according to EN 60529 **Protection** M25, for wire max. Ø=7 mm, seal insert for fourfold cable entry Cable entry Mainboard Plug-in card **Connection electrical** removable plug-in terminal, max. 2,5 mm<sup>2</sup> removable plug-in terminal, max. 1,5 mm<sup>2</sup> pressure connection male Ø=5,0 mm / Ø=6,3 mm, connection tube: PVC, soft Connection mechanical -10..+50 °C, max. 85% rH short term condensation **Ambient condition** screw mounted onto flat surface, prepared for mounting on DIN rail TS35 (35x7,5 mm) according to EN Mounting

Issue date: 06.03.2025 Page 3/7


#### » MOUNTING ADVICES

Before installing the device, please check the leak tightness of the pressure lines. A prerequisite for the operation is a proper installation of all electrical supply, control and sensing leads as well as the pressurized connection line.

- In order to connect the device, the process lines must be unpressurized
- Consider the suitability of the device for the medium to be measured
- Consider maximum pressures

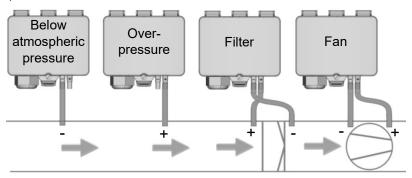


1 Mount the DPA+ mounting base in a suitable location and attach the DPA+. *Note alignment!* 

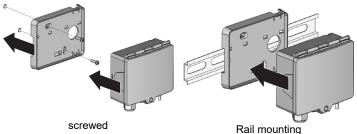



2. Prepare the duct for mounting and mount the duct connection piece.

Attention! Observe dimensions!

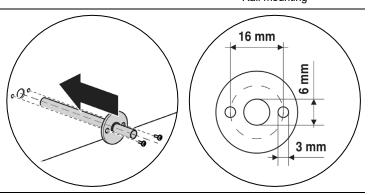


3. Connect pressure tubes to the device. Attention! Oserve labeling!

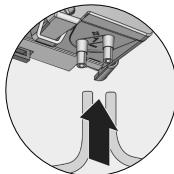

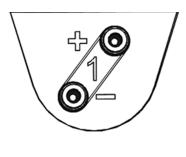


4. Connect pressure tubes to the duct connection pieces

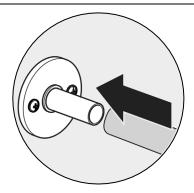



Page 4 / 7 Issue date: 06.03.2025

#### » CONNECTION PLAN



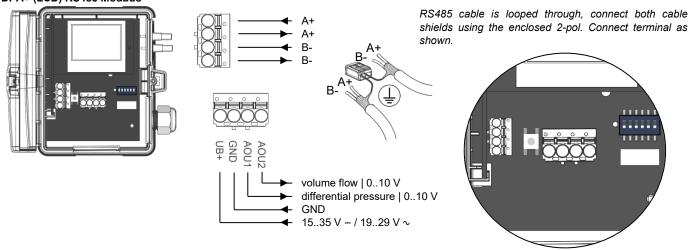



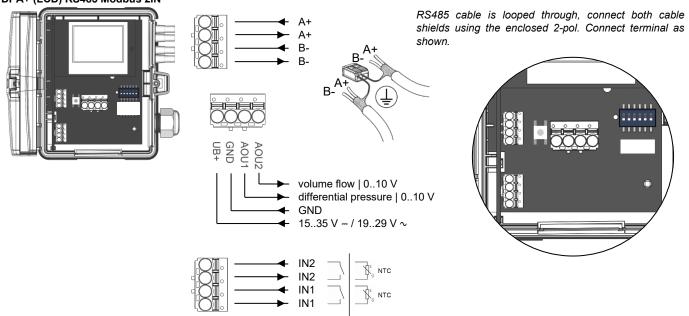



# » DIP SWITCHES, MAIN BOARD

# Measuring range adjustment - Typ 250 | 2500 | 7000

1							1	
ON 1 2 3	ON 1 2 3	ON 1 2 3	ON 1 2 3	ON 1 2 3	ON 1 2 3	ON 1 2 3	ON 1 2 3	= ON = OFF
0+250	0+100	0+50	0+25	-25+25	-50+50	-100+100	-150+150	Pa
0+2500	0+2000	0+1500	0+1000	0+500	0+250	0+100	-100+100	Pa
0+7000	0+5000	0+4000	0+3000	0+2500	0+2000	0+1500	0+1000	Ра
0+1	0+0.4	0+0.2	0+0.1	-0.1+0.1	-0.2+0.2	-0.4+0.4	-0.6+0.6	inchWC
0+10	0+8	0+6	0+4	0+2	0+1	0+0.4	-0.4+0.4	inchWC
0+28 default	0+20	0+16	0+12	0+10	0+8	0+6	0+4	inchWC

Response time
ON
ON
4
4
4
4
0,8 sec
default






Issue date: 06.03.2025 Page 5 / 7

### » DIP SWITCHES, PLUG-IN CARD

The modbus address of the device is set in the range of 1 ... 31 (binary encoded) using a 5-pole DIP switch. With address 0 via DIP, an extended address range (32...247) is available via USEapp.

\* factory default settings

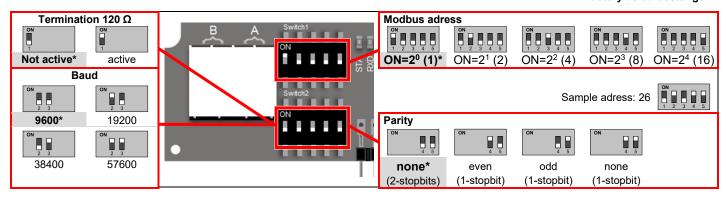

#### » MODBUS KONFIGURATION



#### Modbus addresses:

USE-RS485 Modbus Interface

A detailed description of the Modbus addresses can be found under the following link: → **Download** 

			Register	r 400 = 1	(Unit SI)	Register 40	0 = 2 (U	nit Imperial)
Adress	Access	Description	Re	solution	/ Unit	Resolut	ion / Un	nit
8	R / s16	Differential pressure 1	SI	1.0	Pa	Imperial	0.001	inWC
9	R / u16	Volumetric flow 1 (16 Bit) (if register address 404 is set to the value 2, the value scales the unit m <sup>3</sup> /s)	SI	100.0	m³/h m³/s	Imperial	10.0	cfm
50 Low		<b>Volumetric flow 1 (32 Bit)</b> (if register address 404 is set to the value 2, the value scales the						
51 High	R / u32	unit m³/s)  This register is available since firmware V1.6 (see register 505)	SI	1.0	m³/h m³/s	Imperial	1.0	cfm

### Optional (IN1 | IN2)

NTC10k temperature sensors or floating contacts can be connected to the inputs (IN1 & IN2)

Adress	Access	Description		Values
92	R / s16	Input 1 – Binary signal	0	Contact open
93	R / s16	Input 2 – Binary signal	1	Contact closed

			Regist	er 400 = 1	(Unit SI)	Register 4	00 = 2 (	(Unit Imperial)
Adress	Access	Description	R	esolution	/ Unit	Resolu	ıtion / L	Jnit
90	R/s16	Input 1 - Temperature NTC10k (beta value configurable, register address 490, default: 3864)	SI	0.1	°C	Imperial	0.1	°F
91	R / s16	Input 2 - Temperature NTC10k (beta value configurable, register address 491, default: 3864)	SI	0.1	°C	Imperial	0.1	°F

# »FLOW CALCULATION: (DEFAULT PARAMETERS)

 $q = k * \sqrt{2 * \frac{\Delta p}{\rho}}$  with k=1500, fan manufacturer Rosenberg, Comefri, Nicotra Gebhardt, default measuring range 0..750.000 m³/h. Further calculation formulas, fan manufacturers and k-values can be selected via the USEapp.

Rosenberg · Comefri ·Gebhardt ·Nicotra	Ziehl-Abegg ·EBM-Papst	Fläkt Woods
$q = k * \sqrt{2 * \frac{\Delta p}{\rho}}$	$q = k * \sqrt{\Delta p}$	$q = \frac{1}{k} * \sqrt{\Delta p}$

Page 6 / 7 Issue date: 06.03.2025

#### **»** CONFIGURATION



The Thermokon bluetooth dongle with micro-USB (Item No.: 668262) is required for communication between USEapp and USE-M / USE L products. Commercial bluetooth dongles are not compatible.



Application-specific reconfiguration of the devices can be carried out using the Thermokon USEapp. The configuration is carried out in the voltage-supplied state.

The configuration-app and the app description can be found in the Google Play Store or in the Apple App Store.

#### » APPLICATION NOTICE



The Bluetooth dongle snaps into the socket easily. When removing, please fix the plug-in card (option PCB) so that it is not unintentionally pulled out.


# » AUTOMATIC ZERO-POINT ADJUSTMENT - (OPTIONAL)



Transmitters equipped with the auto-zero adjustment are maintenance free.

The auto-zero adjustment electronically adjusts the transmitter to zero every 10 minutes. The function eliminates all output signal drift due to thermal, electronic or mechanical effects. The auto-zero adjustment takes approx. 4 seconds after which the device returns to its normal measuring mode. During the 4 second correction period, the output and display values will freeze to the latest measured value.

#### » MANUAL ZERO-POINT ADJUSTMENT (FOR DEVICES WITHOUT AUTO-ZERO FUNCTION)

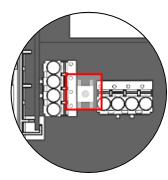

In normal operation zero point adjustment should be executed depending on the device and the measuring range.

Attention! For executing zero point adjustment the power supply must be connected one hour before.


- Release both connection tubes from the pressure terminals + and -
- Press the button until the LED lights permanently
- Wait until the LED flashes again and reinstall the connection tubes to the pressure ports (note + and -)

# **» USE ENCLOSURE WITH UV AND WEATHER RESISTANCE**

After some time, outdoor mounted plastics can lose their color and quality. Therefore, all USE housings are made of special white polycarbonate (PC). The light-stable colorants and additives are used to achieve optimum protection of the polymer while maintaining color stability. The titanium dioxide used is specially developed for polycarbonate and offers excellent UV protection through the reflection of the entire light spectrum including the UV component by 340 nm. This effectively counteracts the otherwise occurring photochemical polymer degradation. The colors stay full for a long time without fading. The material is also resistant to cold and frost.

Issue date: 06.03.2025 Page 7 / 7

## » DIMENSIONS (MM)

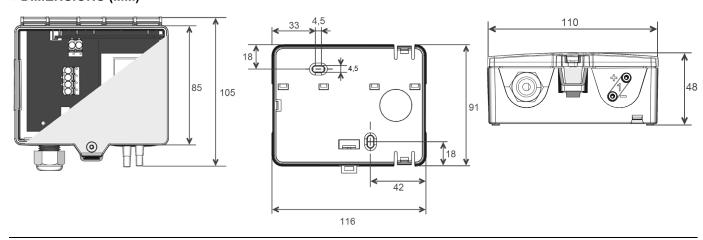

# » ACCESSORIES (INCLUDED IN DELIVERY)

Mounting base enclosure USE-L
2 m PVC connection tube
KKS40 kit

Item No. 668361
Item No. 484268
Item No. 430135

• 2 plastic duct flanges • 4 mounting screws 4x20

Mounting kit universal Item No. 698511

• Cover screw + screw cover• 2 Rawlplugs • 2 Screws (countersunk head) • 2 Screws (rounded head)

# »ACCESSORIES (OPTIONAL)

Bluetooth dongle USE for USEapp

Converter RS485 Modbus-USB incl. driver CD

USB RS485 Modbus RTU Logger

RS485 Biasing Adapter

Item No. 668293

Item No. 809917

Item No. 811378

T-hose connector for pressure hoses  $\emptyset$ =4 mm (10 pcs) Item No. 668323 Adapter 90° angle for pressure hoses  $\emptyset$ =4 mm Item No. 668330 Metal duct connectors 40 mm Item No. 265138 Metal duct connectors 100 mm Item No. 302531